 


# ASSEMBLY INSTRUCTIONS

---

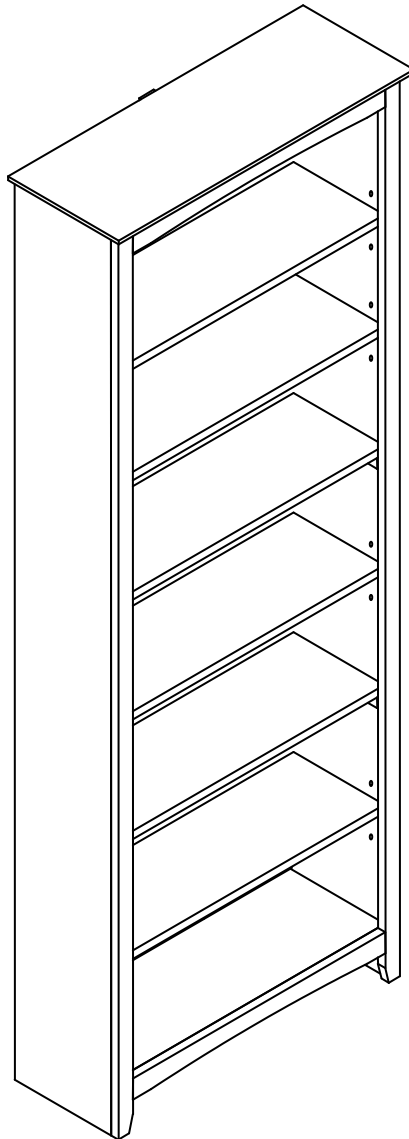

---

Description : 32 X 12 X 84 HIGH BOOK CASE RTA  
Item No. : SH-3228A

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

### IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

### WARNING:

- Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

 

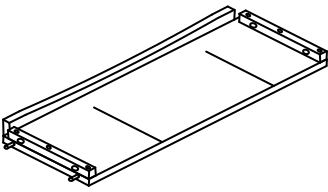 
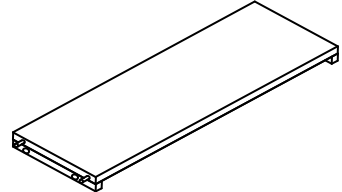 
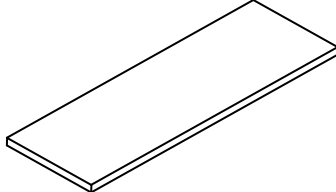 
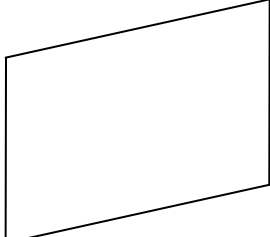 
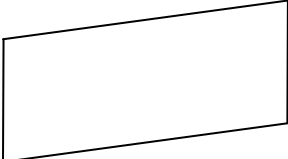 
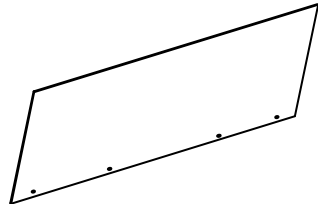 
 
### ASSEMBLY TOOLS REQUIRED

NOT INCLUDED



 



 
 
 

 
 
# PARTS LIST

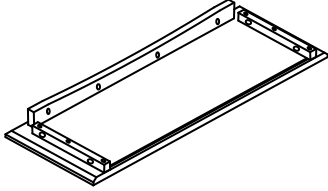When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Top	1		B	Side panel (L-R)	2	
C	Bottom panel	1		D	Shelf panel	2	
E	Adjustable shelf	4		F	Back upper	1	
G	Back center	1		H	Back lower	1	
I	Connector	1					

 
# HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6 x 30mm)	16		2	Small Flat washer (Φ6.5 x 13mm)	16	
3	Lock washer (Φ6.5 x 11mm)	16		4	Allen Key (M4 x 30mm x 120mm)	1	
5	Bracket	16		6	Short screw (M3.5 x 15mm)	20	
7	Long screw (M4 x 30mm)	2		8	Steel band	2	
9	Pan head screw (M4 x 20mm)	16		10	Large Flat washer (Φ6.5 x 19mm)	8	

## STEP 1

Attach side panels (B) to the top (A), and shelf panels (D) and bottom panel (C) with bolts (1), and washers (3) and (2) as shown below. Tighten with Allen key (4).

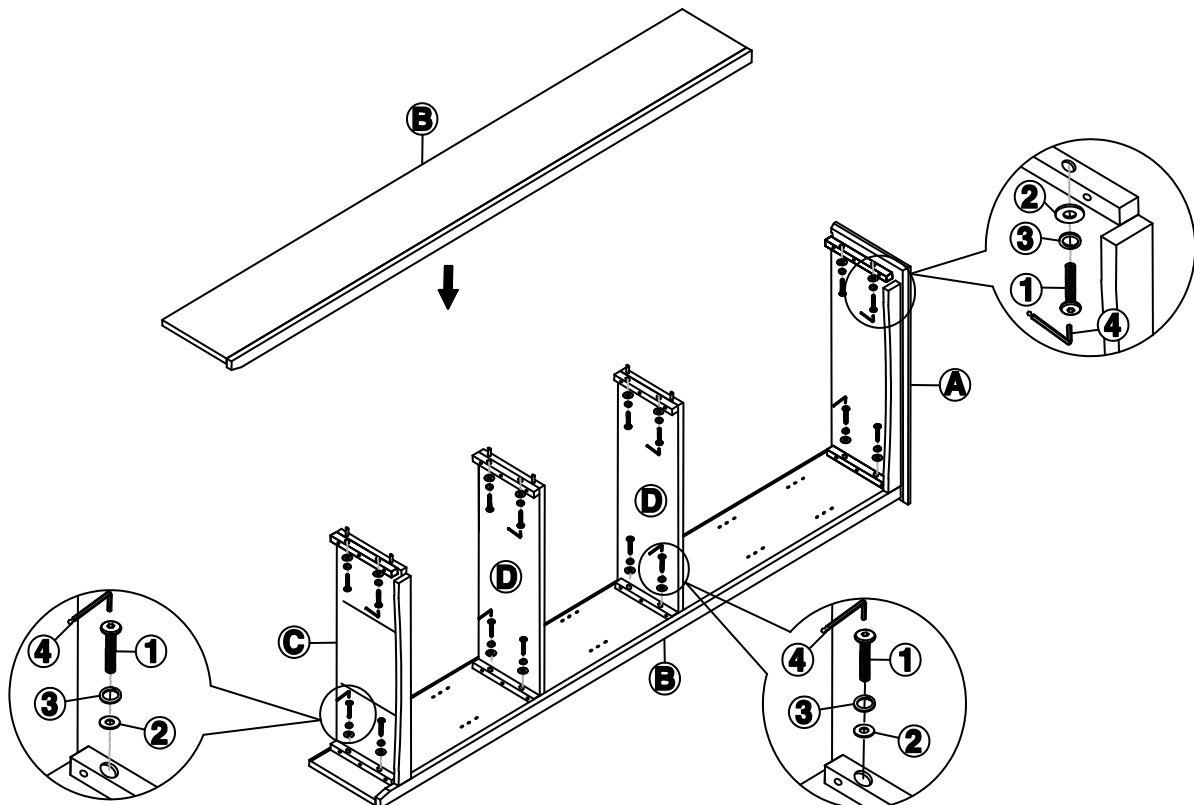

 
ITEM NO. : SH-3228A  
REVISED MAY 17, 2016

Printed in Vietnam

## STEP 2

Slide back panels (F), and (G) and (H) into the grooves of side panels (B) and top (A) as shown below. Attach back panel (H) to bottom panel (C) with pan head screws (9) as shown below. Then attach back panels (H), and (G) and (F) to shelf panels (D) with pan head screws (9) and washers (10). Tighten with a screwdriver.

Remove the paper strip and attach sticky side of connectors (I) to back of the unit. Then attach connector (I) to the top (A), and bottom panel (C) and shelf panels (D) with pan head screws (9). Tighten with a screwdriver.

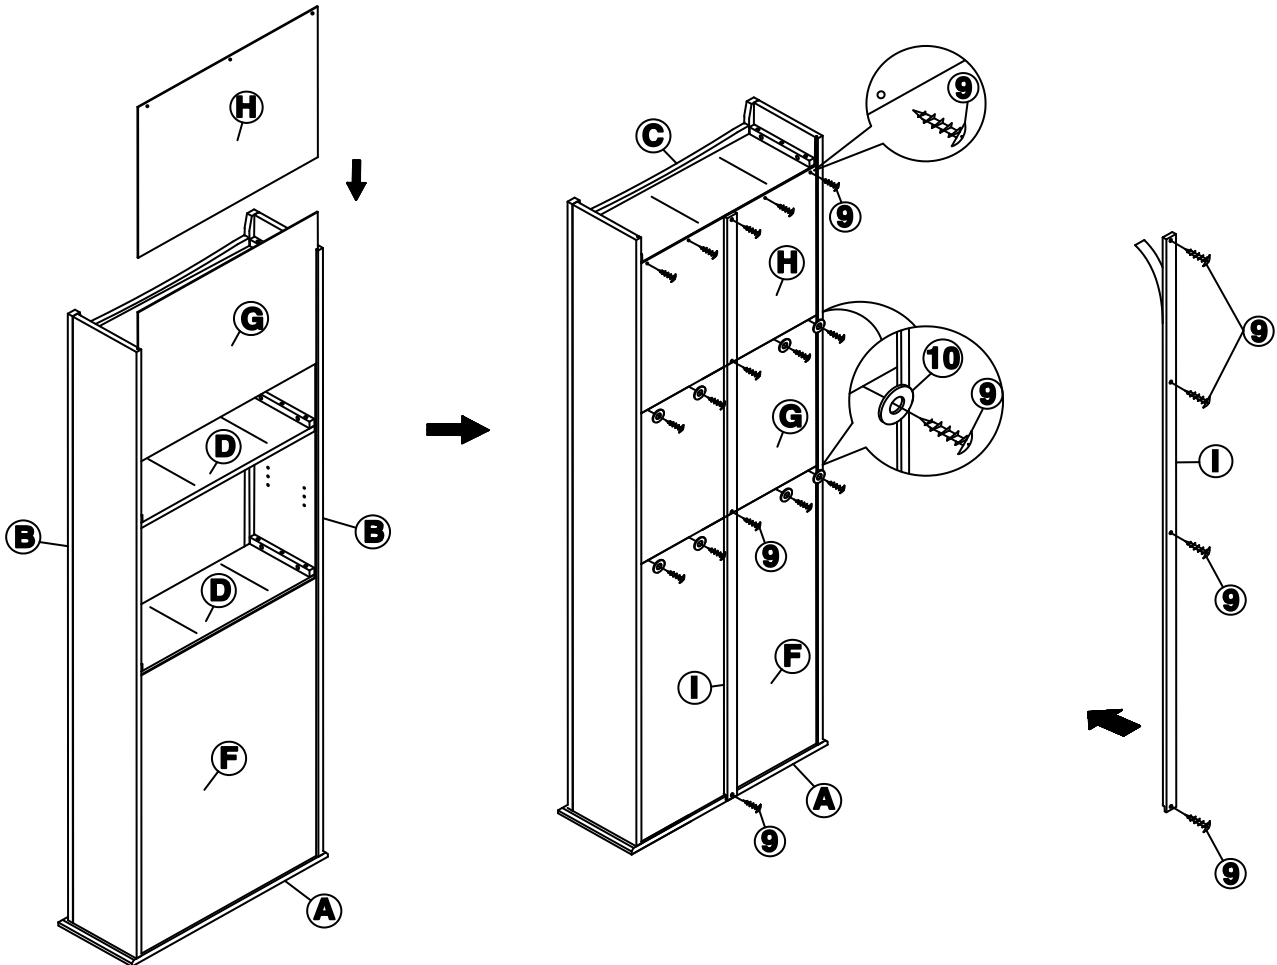

## STEP 3

Attach brackets (5) to the unit as shown below. Then place the shelves (E) on the brackets and attach with screws (6). Tighten with the screwdriver.

Attach steel band (8) to the unit with screws (6) and attach steel band (8) to a wall with screws (7) as shown below (to secure the product and prevent tipping). Tighten with a screwdriver.

