

ASSEMBLY INSTRUCTIONS



Description : COSMOPOLITAN SERVER
Item No. : SV-34

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

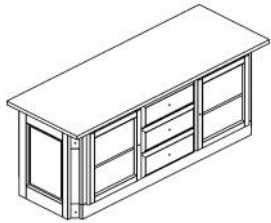
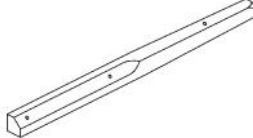



WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish on your product. Protect the surface of the product with a cloth if you are using any product with rubber feet or base.



 
 

 

 

 

 
 
PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Server box	1		B	Leg (L-R)	4	
C	Bottom shelf	1		D	Adjustable shelf	2	
E	Glass	2					

HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

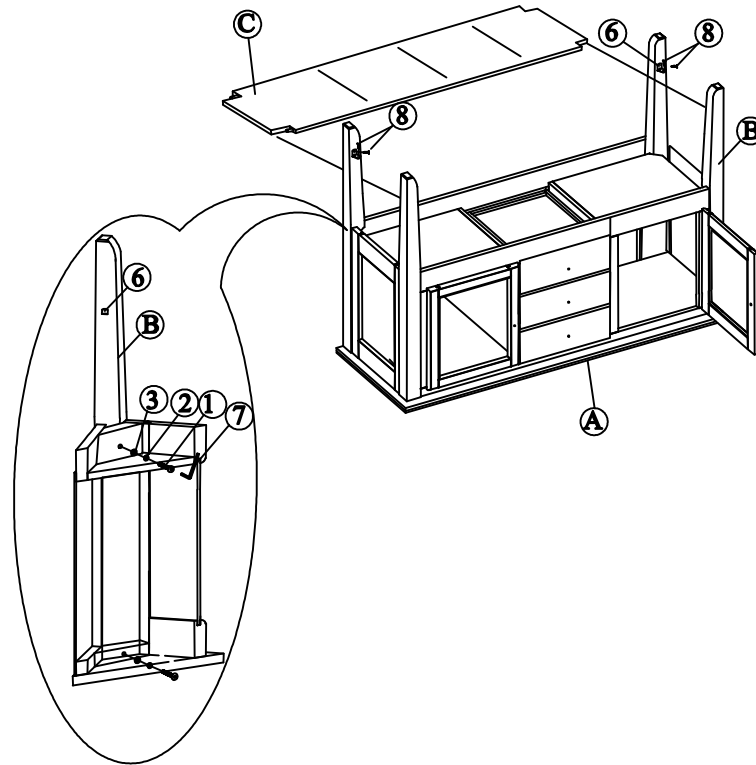
NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6 x 60mm)	8		7	Allen key (4x80mm)	1	
2	Spring washer (Φ6.5x 11mm)	8		8	Short screw (M3x15mm)	18	
3	Flat washer (Φ6.5x 19mm)	8		9	Shelf support bracket	8	
4	Metal knob (Φ32x30mm)	5		10	Steel band	1	
5	Pan head screw (M4 x 25mm)	5		11	Long screw (M4x30mm)	1	
6	L-bracket	4		12	Warning label	5	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> <p>WARNING! THIS ITEM IS PRONE TO TIPPING. USE ANTI-TIPPING HARDWARE (PROVIDED) TO SECURE TO THE WALL. DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE. PLAC HEAVIEST OBJECTS IN LOWER DRAWERS. DO NOT OPEN MORE THAN ONE DRAWER ON THE UNIT AT THE SAME TIME.</p> </div>

STEP 1

Attach legs (B) to the server (A) with bolts (1), washers (2) and (3) as shown below. Tighten with Allen key (7).

Attach L-brackets (6) to legs (B) with screws (8). Tighten with a screwdriver.

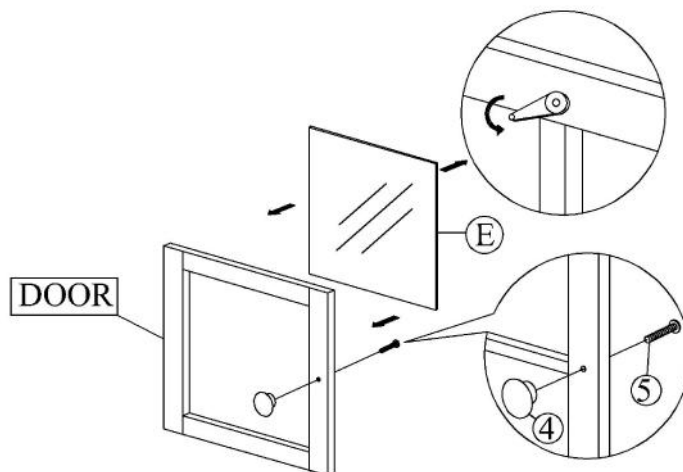
Attach L-brackets (6) to shelf (C) with screws (8) as shown below. Tighten with a screwdriver. Note that the shelf (C) leans on L-brackets when the unit standing on legs.



STEP 2

Attach glass (E) to doors and lock them up at back.

Attach knobs (4) to doors and drawer fronts with screws (5) as shown below. Tighten with a screwdriver.



STEP 3

Stick the Warning labels (12) at back side of doors and inside all drawers before use.

Attach steel band (10) to the unit with screws (8) at position as shown below. Tighten with a screwdriver.

Attach the steel band to the wall with screws (11) to secure the product and prevent tipping.

Attach brackets (9) to the unit with screws (8) as shown below. Tighten with a screwdriver.

Put the shelves (D) on brackets (9).

