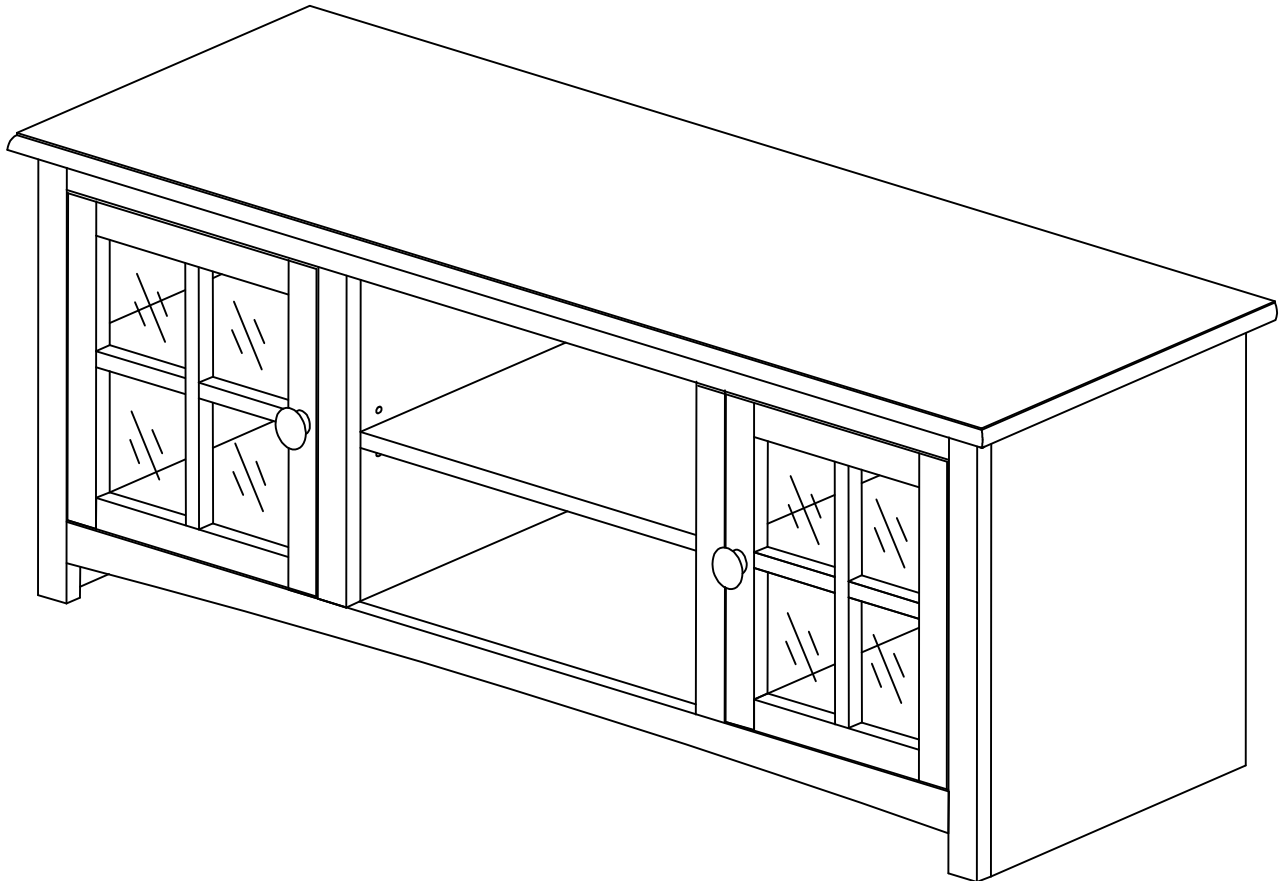 


ASSEMBLY INSTRUCTIONS



Description	: FRANKLIN 54 IN ENTERTAINMENT CENTER
Item No.	: TV-56

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

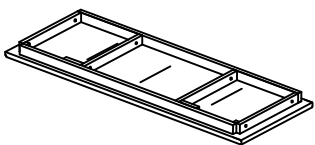 
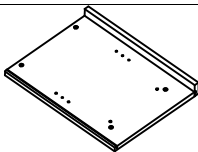 
 
 
 
 
 
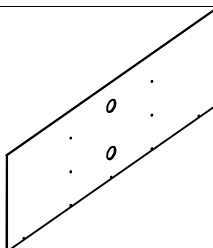 
 
ASSEMBLY TOOLS REQUIRED

NOT INCLUDED



 
 

 

 

 

 

 
PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Top	1		F	Side panel (L-R)	2	
B	Bottom panel	1		G	Vertical panel (L-R)	2	
C	Center shelf	1		H	Side shelf	2	
D	Door (L-R)	2		I	Back panel	1	
E	Glass	2					

HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6 x 30mm)	16		7	Allen Key (M4 x 80mm)	1	
2	Spring washer (Φ6.5 x 11mm)	16		8	Short pan head screw (M3 x 15mm)	9	
3	Flat Washer (Φ6.5 x 13mm)	16		9	Screw (M3 x 15mm)	16	
4	Wooden knob (Φ38 x 30mm)	2		10	Magnet	2	
5	Long pan head screw *Metal knob: (M4 x 22mm) *Wooden knob: (M4 x 25mm)	2		11	Bracket	12	
6	Door pin (Φ5.2/Φ13 x 1.2mm) (Φ7 x 10mm)	4			METAL KNOB (Φ30 x 30mm) GOES WITH FINISHED ITEM ONLY.	2	

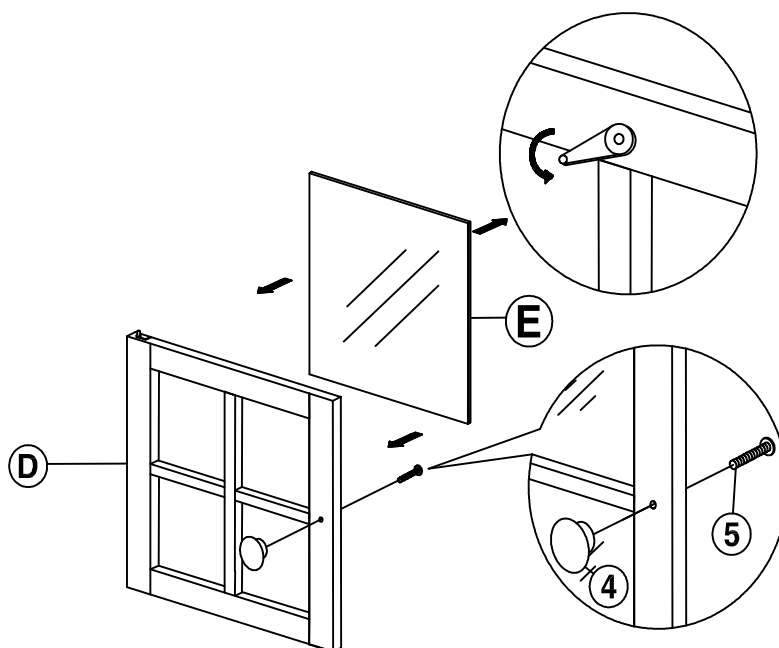 
ITEM NO.: TV-56
REVISED MAR 25, 2016

Printed in Vietnam

STEP 1

Insert glass sections (E) into back of doors (D), and lock it as shown below.

Attach knobs (4) to doors (D) with pan head screws (5) as shown below. Tighten with a screwdriver.




STEP 2

Attach panels (G) to top (A) and bottom panel (B) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (7).


Attach doors (D) to top (A) and bottom panel (B) with door pins (6).

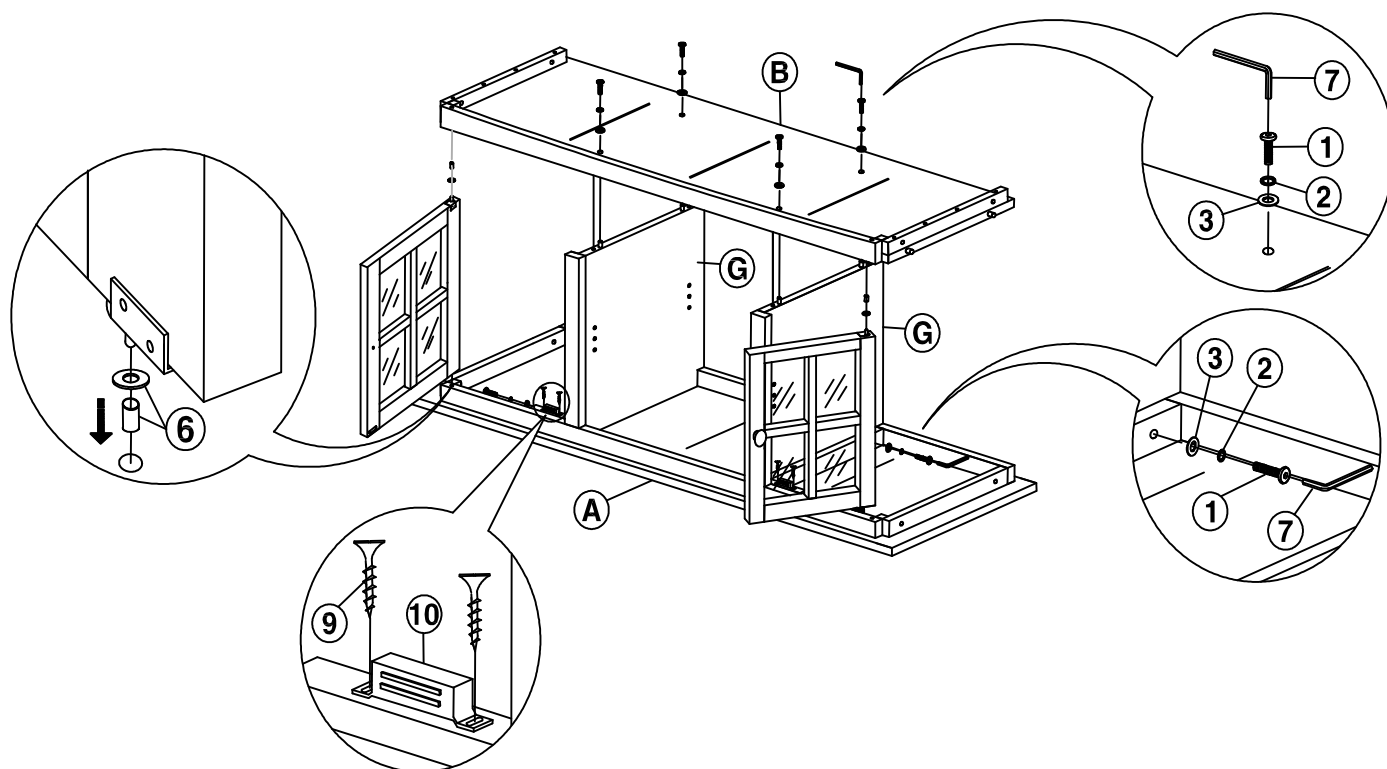 Attach magnets (10) to top (A) with screws (9) as shown below. Tighten with a screwdriver.




STEP 3

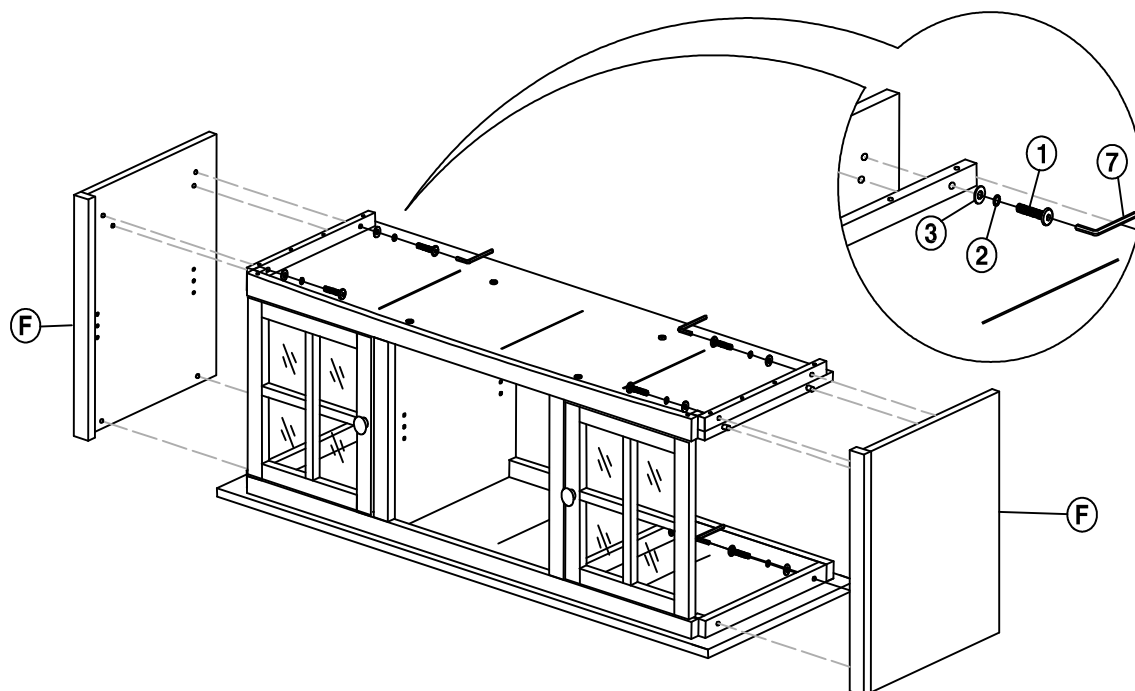 Attach side panels (F) to top (A) and bottom panel (B) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (7).



STEP 4

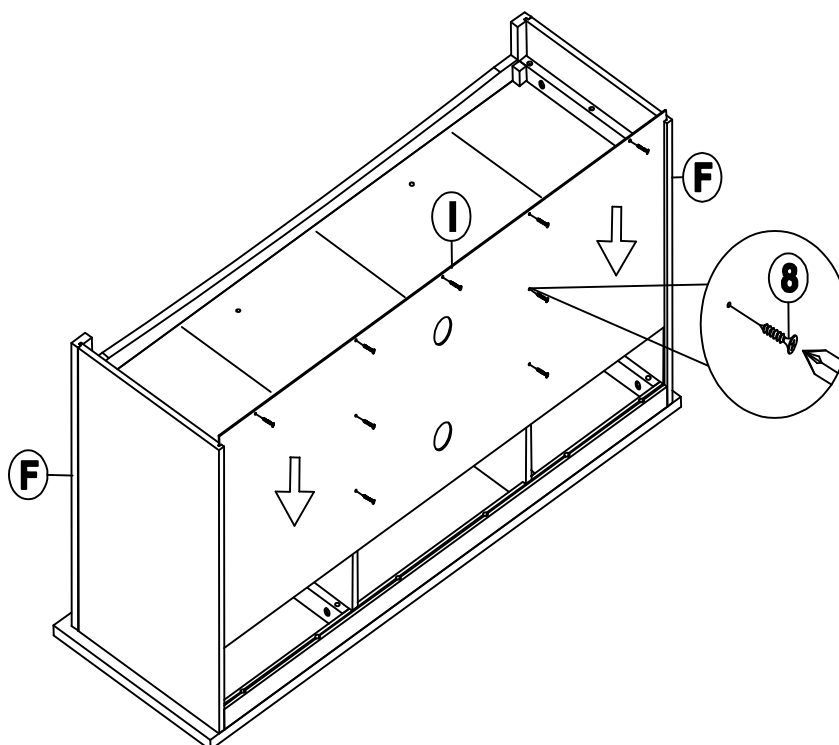 Slide back panel (I) into grooves of top (A) and side panels (F). Then attach back panel (I) to the unit with pan head screws (8) as shown below. Tighten with a screwdriver.



STEP 5 (FINISH)

Attach brackets (11) to the unit. Place the shelves (C) and (H) on the brackets, and attach with screws (9) as shown below. Tighten with a screwdriver.

