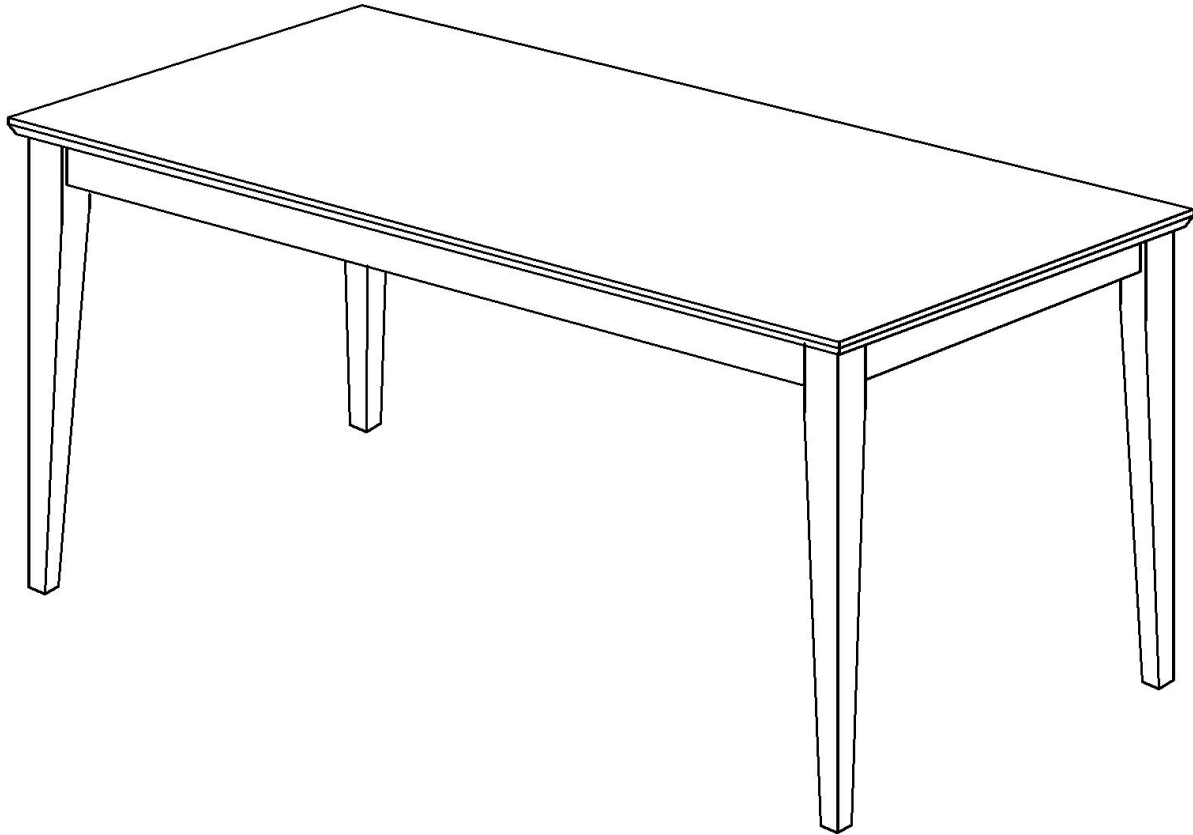


ASSEMBLY INSTRUCTIONS



Description : 36X72 TABLE WITH SHAKER LEGS
Item No. : T-3672S

ITEM NO : T-3672S
ISSUED MAY 29, 2014

Printed in Vietnam

BEFORE ASSEMBLY

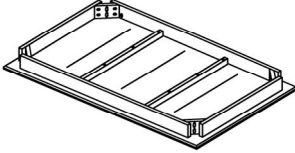

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.



 

PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Table top	1		B	Legs	4	

HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Hexagon nut (M8x13mm)	8		3	Lock washer (φ8.5x13mm)	8	
2	Flat washer (φ8.5x19mm)	8		4	Wrench (13mm)	1	

STEP 1

Attach the legs (B) to the Top (A) with washers (2) and (3), and nuts (1), as shown below. Tighten with the wrench (4).

