
ASSEMBLY INSTRUCTIONS

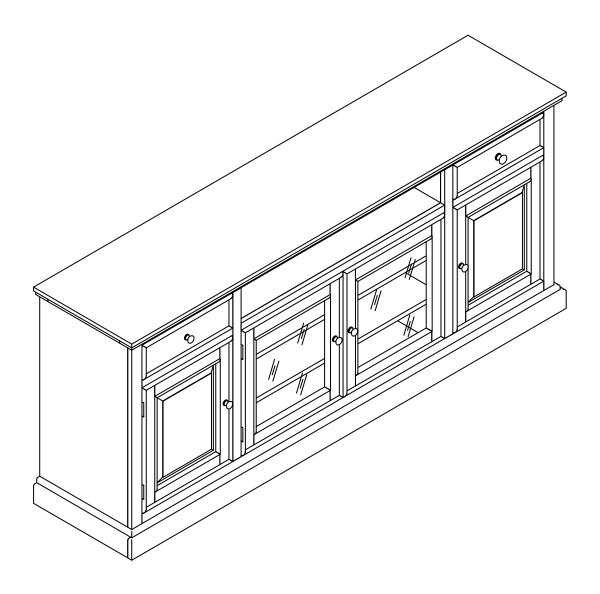

Description : TRENTON TV CENTER Item No. : TV-10A AND TV-10B

ITEM NO.: TV-10A AND TV-10B REVISED NOV 01, 2018

BEFORE ASSEMBLY


Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

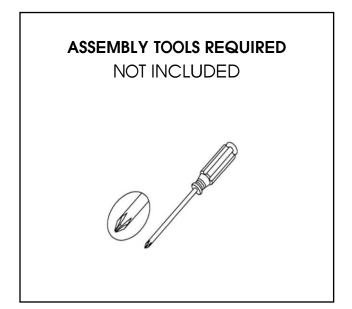

ITEM NO.: TV-10A AND TV-10B REVISED NOV 01, 2018

PART LIST TV-10A

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
А	Тор	1		В	Bottom	2	

PART LIST TV-10B

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
С	Vertical panel (L-R)	2		D	Fixed shelf	1	
E	Side panel (L-R)	2		F	Apron (L-R)	2	
G	Side Back panel	2		н	Back panel	2	
I	Center Back panel	1		J	H-connector	2	

ITEM NO.: TV-10A AND TV-10B REVISED NOV 01, 2018

PART LIST TV-10B

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
К	Center Leg	2		L	Glass section (407 x 373 x 3mm)	2	
М	Door frame	2		N	Door	2	
0	Drawer front	2		Р	Drawer side (L-R)	4	
Ø	Drawer bottom	2		R	Drawer back	2	
s	Support bar	2		т	Side Adjustable shelf	2	
U	Center Adjustable shelf	2					

HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6 x 35mm)	24		9	Bracket	16	
2	Spring Washer (Φ6.5 x 11mm)	24		10	Long Pan head screw *Metal knob: (M4x22mm) *Wooden knob:(M4x25mm)	6	
3	Large Flat Washer (Ф6.5 x 19mm)	16			Wooden Knob (Φ38 x 30mm)	6	
4	Small Flat Washer (Φ6.5 x 13mm)	8	0	11	METAL KNOB (Φ30 x 30mm) GOES WITH FINISHED ITEM ONLY.	6	
5	Long Screw (M4 x 35mm)	28	*****	12	Steel band	2	00000000
6	Short Pan head screw (M3.5 x 15mm)	12	(-1111-	13	Allen key (M4 x 30mm x 110mm)	1	
7	Short Screw (M3.5 x 15mm)	44	*******	14	Short Pan head screw (M3 x 15mm)	8	(****
8	Magnet	4					

NOTE: HARDWARE IS PACKED IN CARTON TV-10B.

ITEM NO.: TV-10A AND TV-10B REVISED NOV 01, 2018


Attach vertical panels (C) to top (A) and shelf (D) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (13).

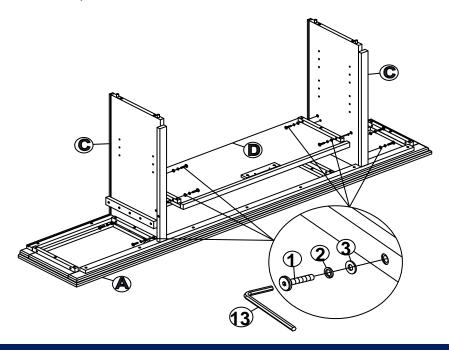

STEP 2

Insert aprons (F) into vertical panels (C) and side panels (E), and then attach with screws (5) as shown below. Attach side panels (E) to top (A) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (13).


Attach magnets (8) to aprons (F) and shelf (D) with pan head screws (14) as shown below. Tighten with a screwdriver.

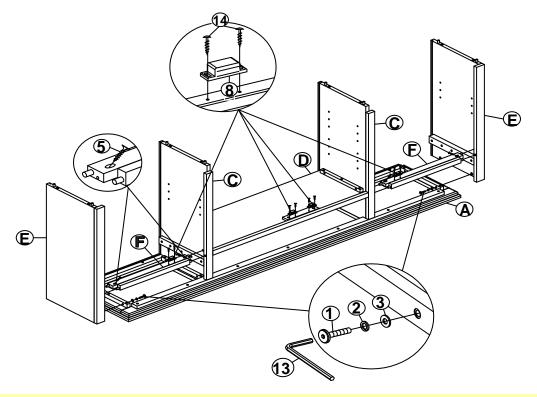

ITEM NO.: TV-10A AND TV-10B REVISED NOV 01, 2018


Attach bottom (B) to side panels (E) with bolts (1), and washers (2) and (4) as shown below. Tighten with Allen key (13).

Attach bottom (B) to vertical panels (C) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (13).

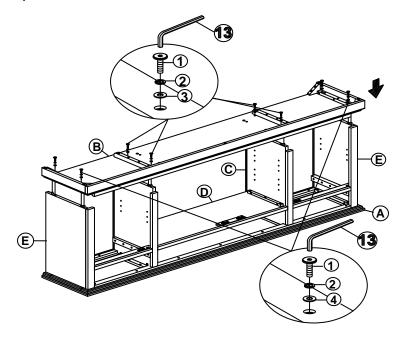

STEP 4


Attach legs (K) to bottom (B) with bolts (1), and washers (2) and (4) as shown below. Tighten with Allen key (13). Attach H-connector (J) to bottom (B) with screws (5) as shown below. Tighten with a screwdriver. Slide back panels (G), and (H) and (I) into the grooves of vertical panels (C) and H-connector, and then attach back panels to bottom (B) with screws (6) as shown below.

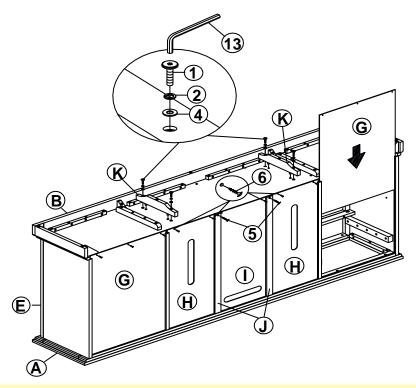

ITEM NO.: TV-10A AND TV-10B REVISED NOV 01, 2018

Attach doors (N) and (M) to side panels (E) and vertical panels (C) with screws (7) as shown below. Tighten with a screwdriver.


Insert glass sections (L) into back of doors (M), and lock it as shown below.

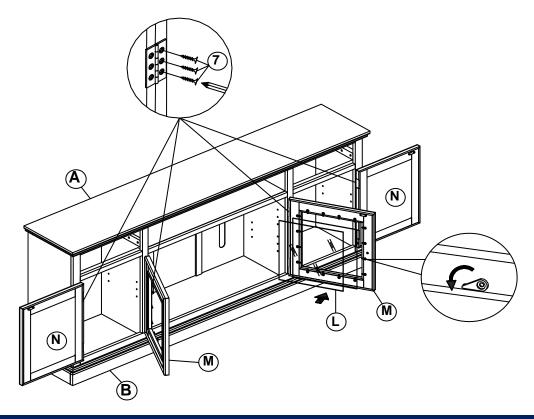

STEP 6

Attach drawer sides (P) to drawer front (O) with screws (5) as shown below. Tighten with a screwdriver. Insert drawer bottom (Q) into the grooves at bottom of drawer sides (P) and drawer front (O) as shown below.

Attach drawer back (R) to drawer sides (P) with screws (5) as shown below. Tighten with a screwdriver. Attach support bar (S) to bottom drawer (Q) with screws (5) as shown below. Tighten with a screwdriver.

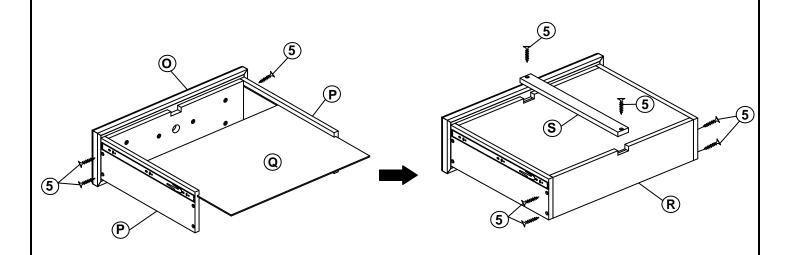

ITEM NO.: TV-10A AND TV-10B REVISED NOV 01, 2018

Carefully put the drawers into the unit.

Insert brackets (9) into the unit as shown below. Place shelves (U) and (T) on the brackets and attach with screws (7). Tighten with a screwdriver.

Attach knobs (11) to front of drawer with pan head screws (10) as shown below. Tighten with a screwdriver. Attach steel bands (12) to the unit with short screws (7) and attach the steel band to the wall with long screws (5) as shown below (to secure the product and prevent tipping). Tighten with a screwdriver.

