 


ASSEMBLY INSTRUCTIONS

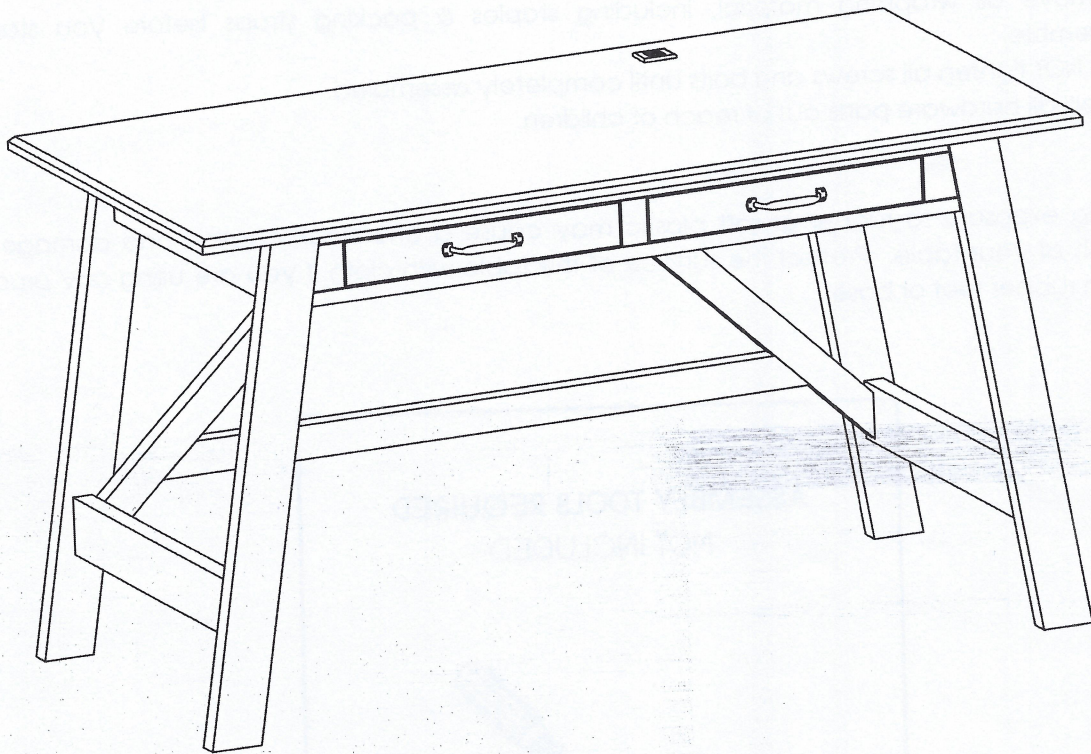

Description : SERENDIPITY DESK

Item No. : OF-69

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

 
IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:

 
 
 
 
Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your table. Protect the surface of the table with cloth if you are using any product with rubber feet or base.

ASSEMBLY TOOLS REQUIRED NOT INCLUDED

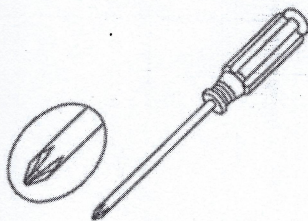


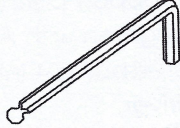 

 


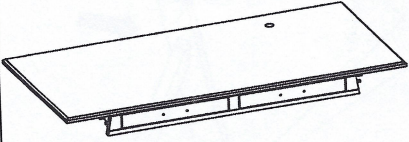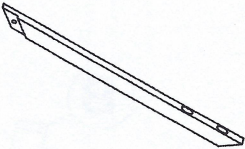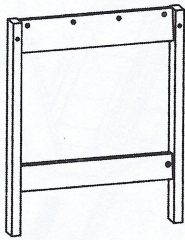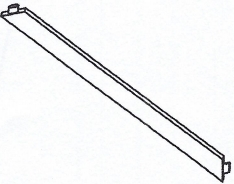 


 

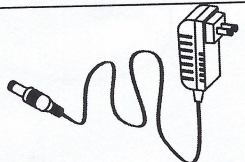 
PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Top	1		C	Support Bar (L-R)	2	
B	Side Frame (L-R)	2		D	Crossbar	1	


HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

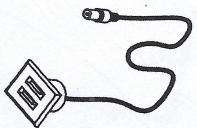NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Short Bolt (M6 x 35mm)	8		7	Allen key (M4 x 30 x 110mm)	1	
2	Small Lock Washer (φ6.5 x 11mm)	8		8	Screw (M4 x 50mm)	2	
3	Small Flat Washer (φ6.5 x 19mm)	8		9	Handle	2	
4	Long Bolt (M8 x 45mm)	4		10	Pan head screw (M4 x 25mm)	4	
5	Large Lock Washer (φ8.5 x 13mm)	4		11	USB charger	1	
6	Large Flat Washer (φ8.5 x 19mm)	4		12	Power Adapter	1	

STEP 1

 
Pull out the drawers. Attach side frames (B) to the top (A) with bolts (1), and washers (2) and (3), as shown below. Tighten with Allen key (7).

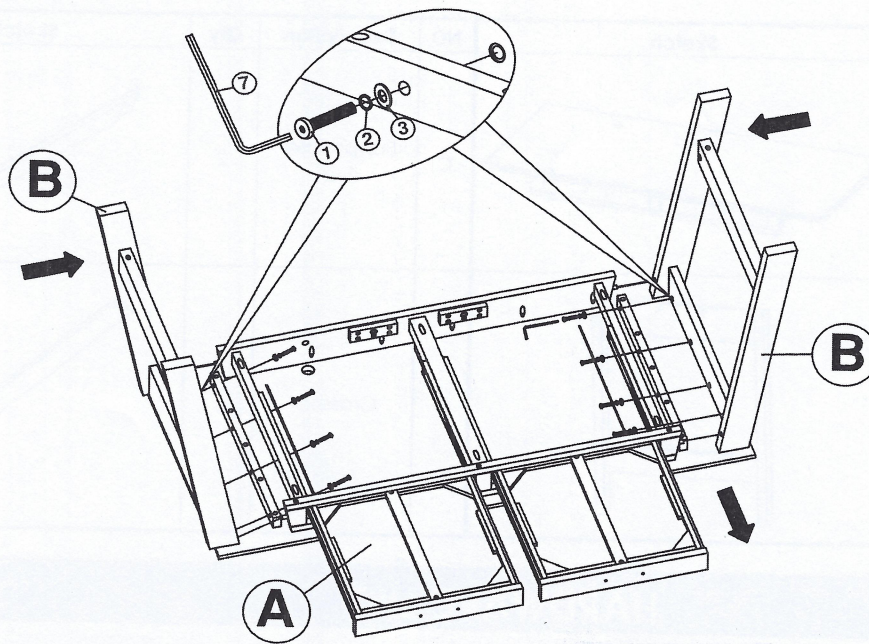

STEP 2


Attach support bars (C) to top (A) and side frames (B) with bolts (4), and washers (5) and (6) as shown below. Tighten with Allen key (7).

 Insert crossbar (D) into support bars (C) as shown below and attach with screws (8). Tighten with a screwdriver.

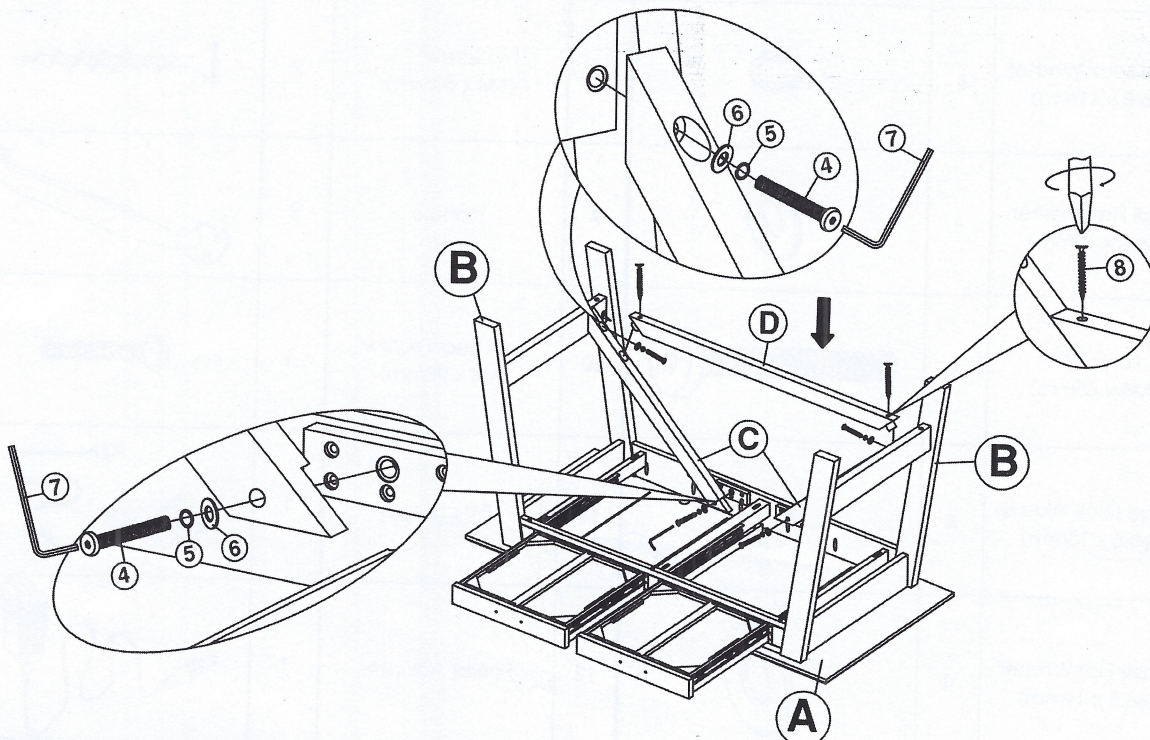


STEP 3

 Attach handles (9) to front of drawers with pan head screws (10) as shown below. Tighten with a screwdriver.

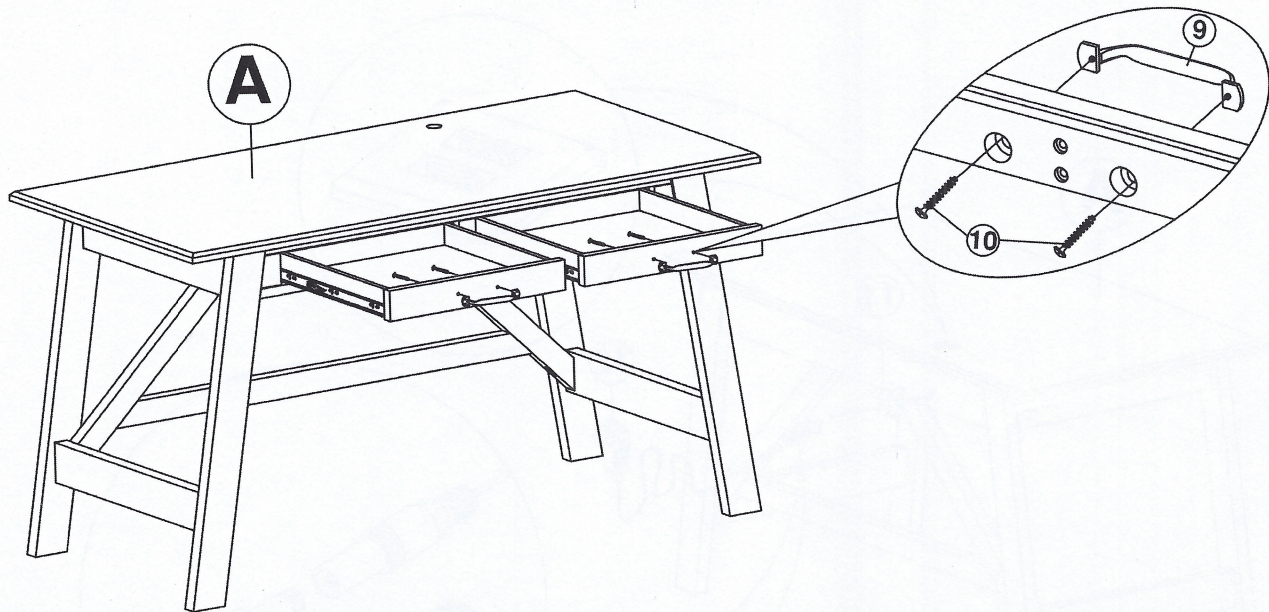

STEP 4

 Insert USB charger (11) into the top (A), as shown below.

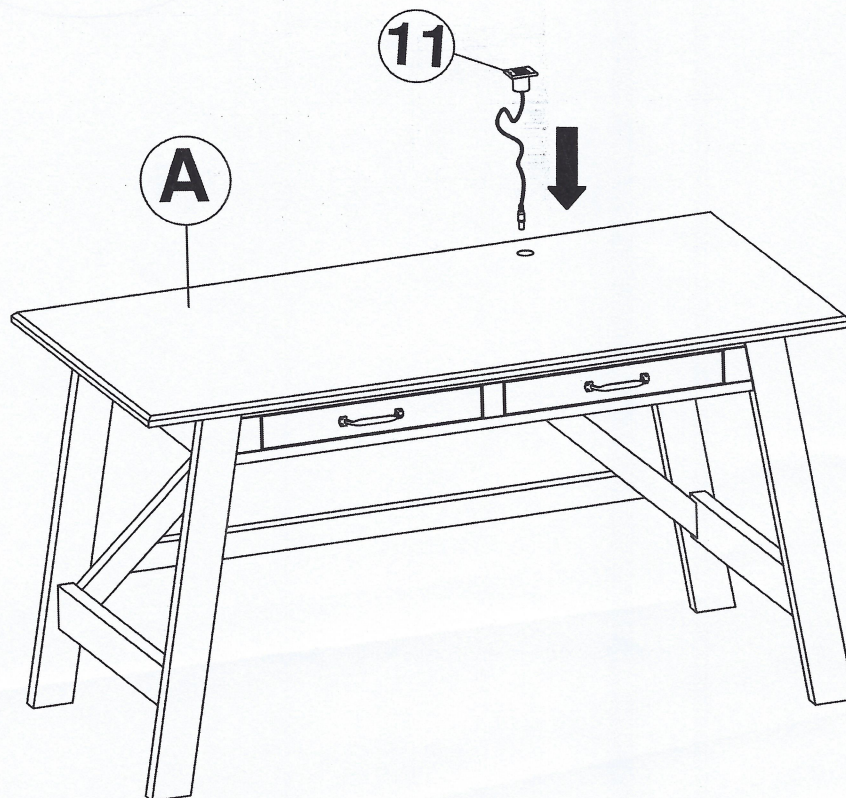

STEP 5

Plug the power adapter (12) into cable of the USB charger (11) inside the top, as shown below.

