 


# ASSEMBLY INSTRUCTIONS

---

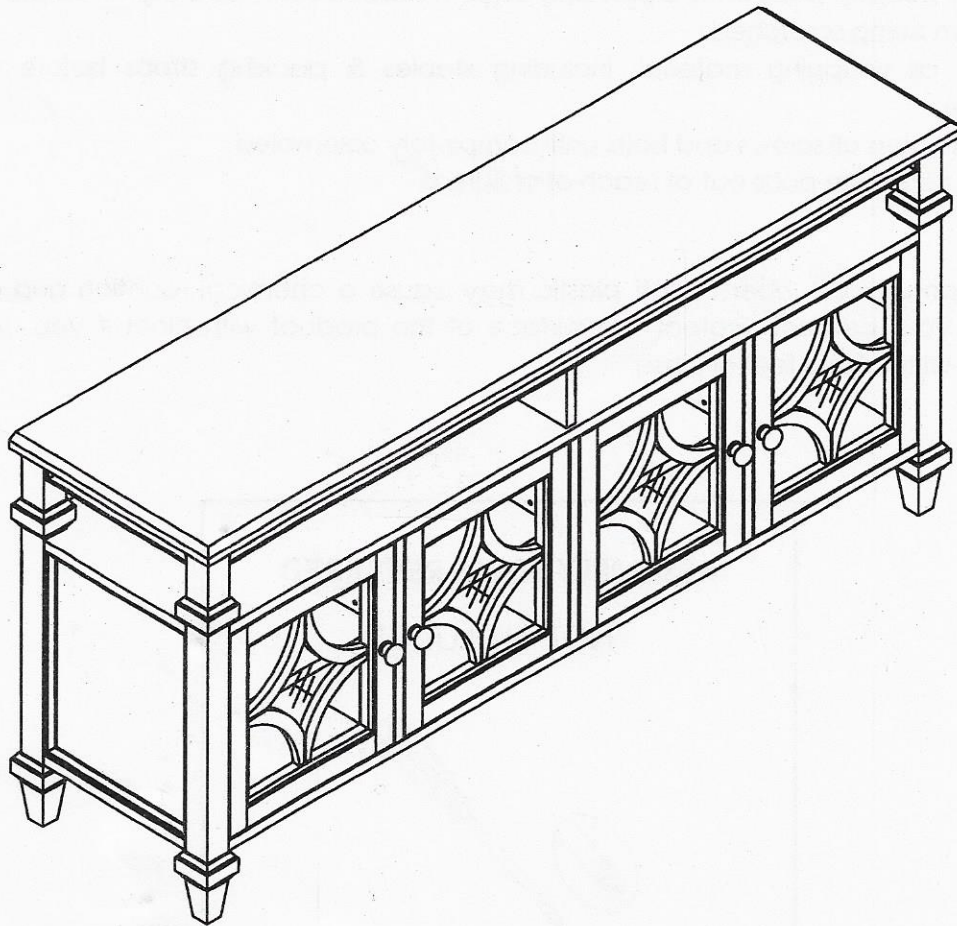

## **WARNING!**

***Serious or fatal injuries can occur from furniture tip over. Use tip over restraint (provided) to secure this product to the wall.***

---

|             |                      |
|-------------|----------------------|
| Description | : JOSEPHINE TV STAND |
| Item No.    | : TV-19              |

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

### IMPORTANT NOTE:

 
- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

### WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

### ASSEMBLY TOOLS REQUIRED

 
 
 
 
 
 
 
 
 
 
 
 
 
NOT INCLUDED

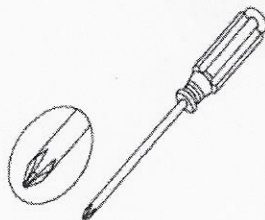



 

 




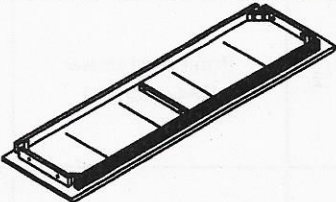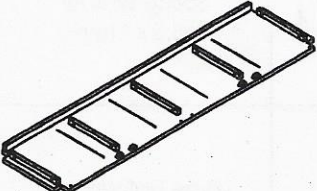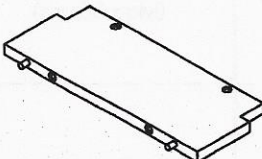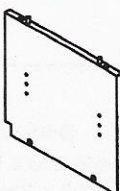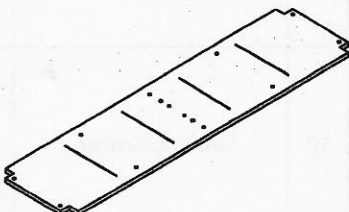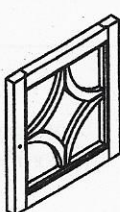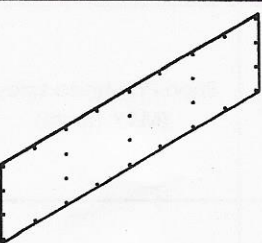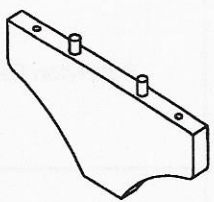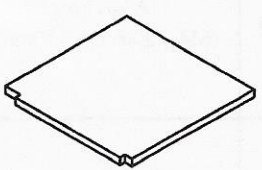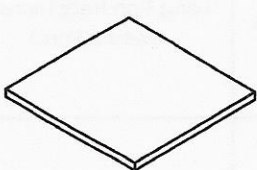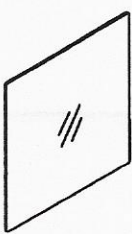 





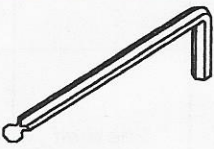 

# PART LIST

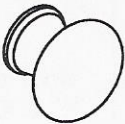When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

| NO | Description           | Qty | Sketch  | NO | Description               | Qty | Sketch  |
|----|-----------------------|-----|---|----|---------------------------|-----|---|
| A  | Top                   | 1   |    | B  | Side Frame (L-R)          | 2   |    |
| C  | Upper Shelf           | 1   |    | D  | Vertical panel            | 1   |    |
| E  | Center Vertical Panel | 1   |    | F  | Side Vertical Panel (L-R) | 2   |    |
| G  | Bottom Shelf          | 1   |   | H  | Door (L-R)                | 4   |   |
| I  | Back panel            | 1   |  | J  | Center Leg                | 1   |  |
| K  | Side shelf (L-R)      | 2   |  | L  | Center Shelf              | 2   |  |
| M  | Glass                 | 4   |  |    |                           |     |   |

# HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

| NO | Description                                   | Qty | Sketch  | NO | Description                         | Qty | Sketch  |
|----|---|-----|---|----|-------------------------------------|-----|---|
| 1  | Wooden Knob<br>(Φ35 x 35mm)                   | 4   |    | 2  | Pan head screw<br>(M4 x 25mm)       | 4   |    |
| 3  | Short Bolt<br>(M6 x 35mm)                     | 28  |    | 4  | Spring Washer<br>(Φ6.5 x 11mm)      | 30  |    |
| 5  | Small Flat Washer<br>(Φ6.5 x 13mm)            | 4   |    | 6  | Large Flat Washerr<br>(Φ6.5 x 19mm) | 26  |    |
| 7  | Door pin<br>(Φ5.2/Φ13 x 1.2mm)<br>(Φ7 x 10mm) | 8   |    | 8  | Bracket                             | 16  |    |
| 9  | Short Screw<br>(M3.5 x 15mm)                  | 44  |  | 10 | Steel Tip Bracket                   | 4   |  |
| 11 | Flat Nylon Tie                                | 2   |  | 12 | Short Pan head screw<br>(M4 x 15mm) | 2   |  |
| 13 | Long Pan head screw<br>(M4 x 50mm)            | 2   |  | 14 | Allen key<br>(M4 x 30mm x 110mm)    | 1   |  |
| 15 | Long Bolt<br>(M6 x 50mm)                      | 2   |  |    |                                     |     |   |



**NOTE: WARNING LABEL (INCLUDED)**

## **WARNING**

**Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tipover:**

 
- Install tipover restraint provided.
- Place heaviest items in the lower drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

**Use of tipover restraints may only reduce, but not eliminate, the risk of tipover.**

*This is permanent label. Do not remove.*

## STEP 1

Attach side frame (B) and vertical panel (D) to top (A) with bolts (3), and washers (4) and (6) as shown below. Tighten with Allen key (14).

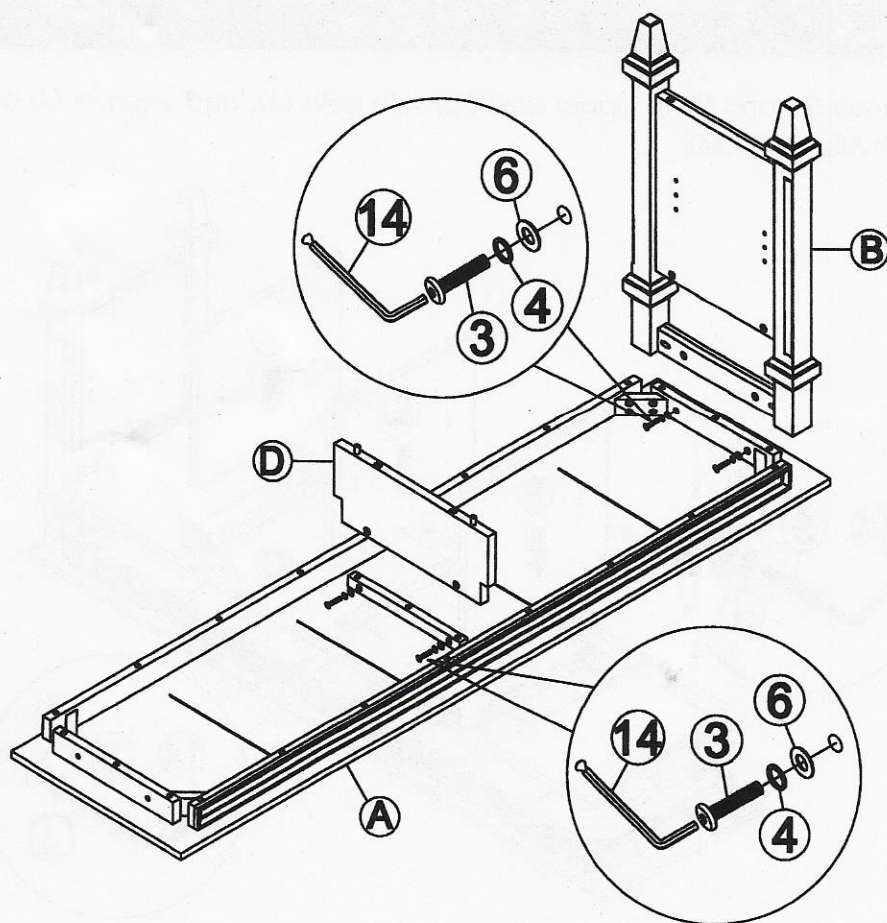




## STEP 2


Attach upper shelf (C) to side frame (B) with bolts (3), and washers (4) and (6) as shown below. Tighten with Allen key (14).

 Attach upper shelf (C) to vertical panel (D) with bolts (3), and washers (4) and (5) as shown below. Tighten with Allen key (14).

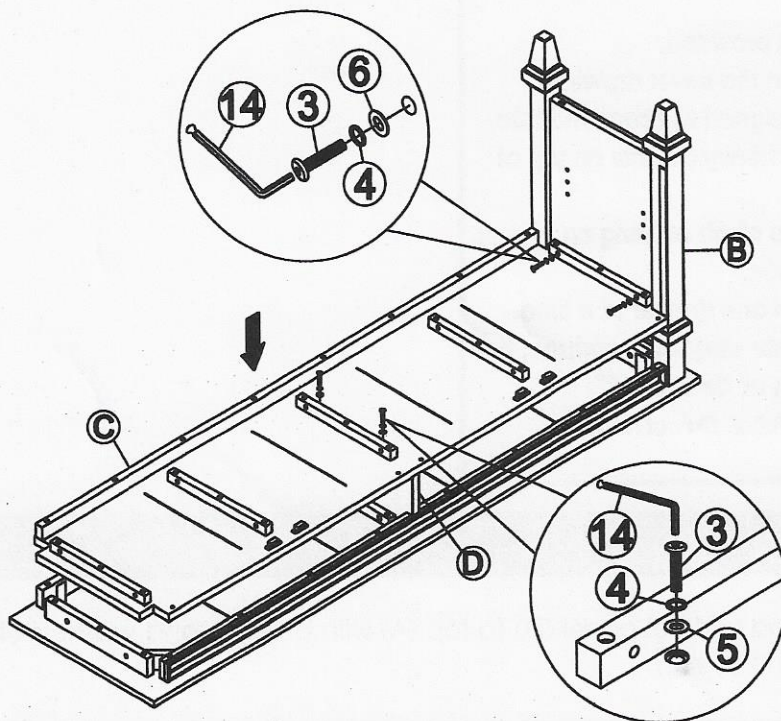

## STEP 3

 
Attach vertical panels (E) and (F) to upper shelf (C) with bolts (3), and washers (4) and (6) as shown below. Tighten with Allen key (14).

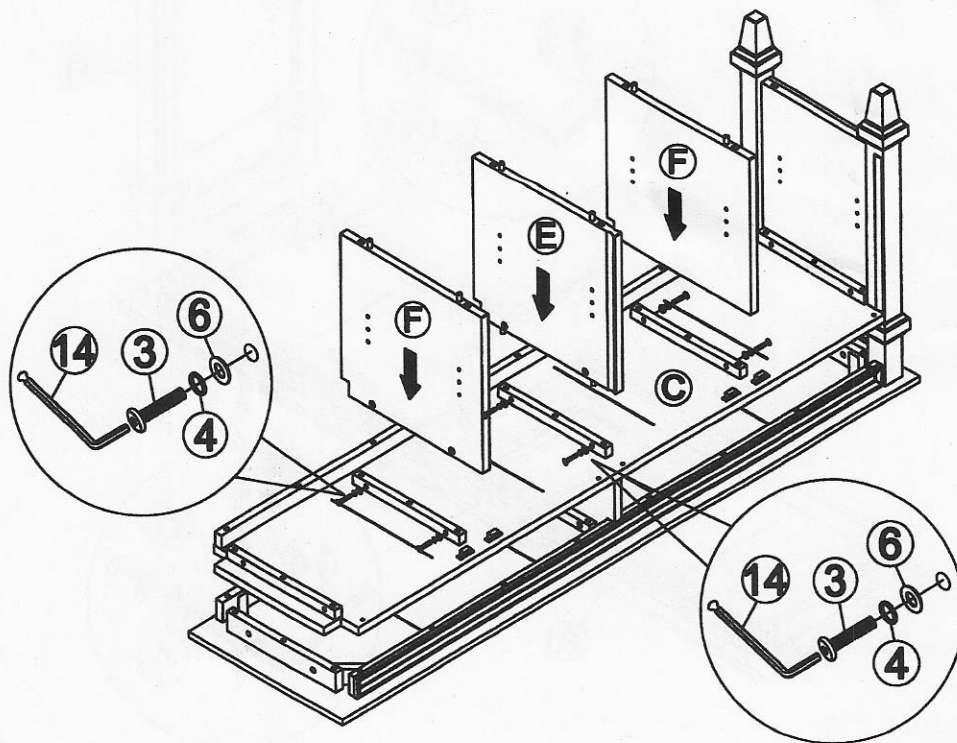




## STEP 4

 Attach doors (H) to bottom shelf (G) and upper shelf (C) with door pins (7) as shown below. Attach bottom shelf (G) to vertical panels (E) and (F) with bolts (3), and washers (4) and (6) as shown below. Tighten with Allen key (14).

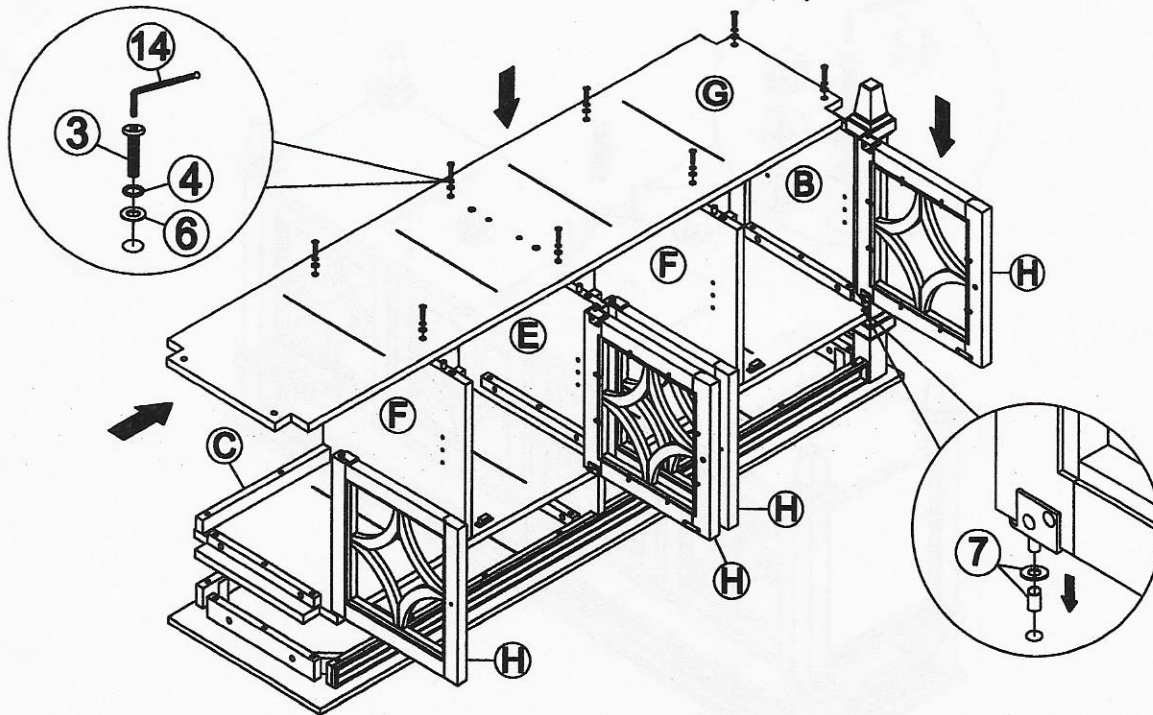

## STEP 5

 
Attach side frame (B) to top (A), upper shelf (C) and bottom shelf (G) with bolts (3), and washers (4) and (6) as shown below. Tighten with Allen key (14).

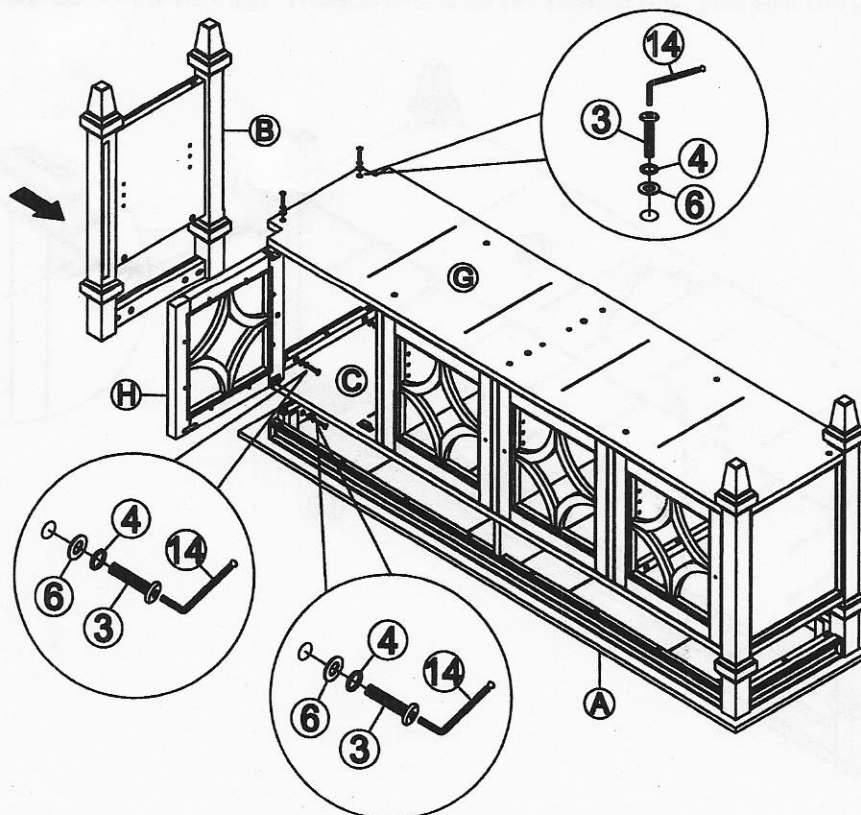




## STEP 6

 Attach leg (J) to bottom shelf (G) with bolts (15), and washers (4) and (5) as shown below. Tighten with Allen key (14).

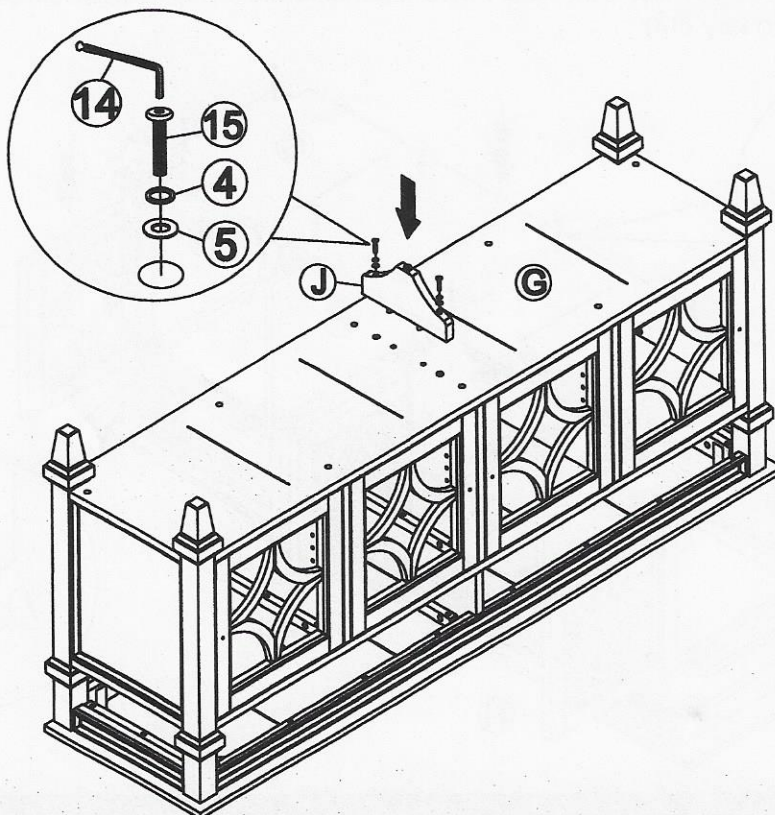

## STEP 7

 
Attach back panel (I) to the unit with screws (9) as shown below. Tighten with a screwdriver.

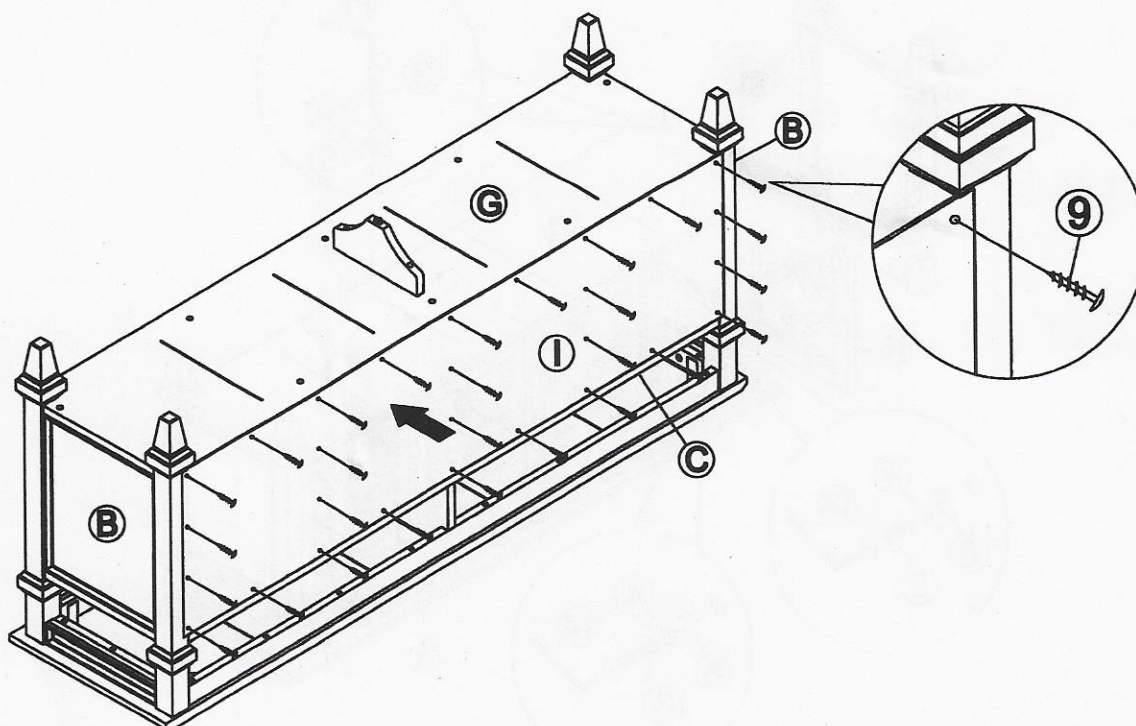



## STEP 8

 Insert brackets (8) into the unit as shown below. Place shelves (K) and (L) on the brackets (8) and attach with screws (9). Tighten with a screwdriver.

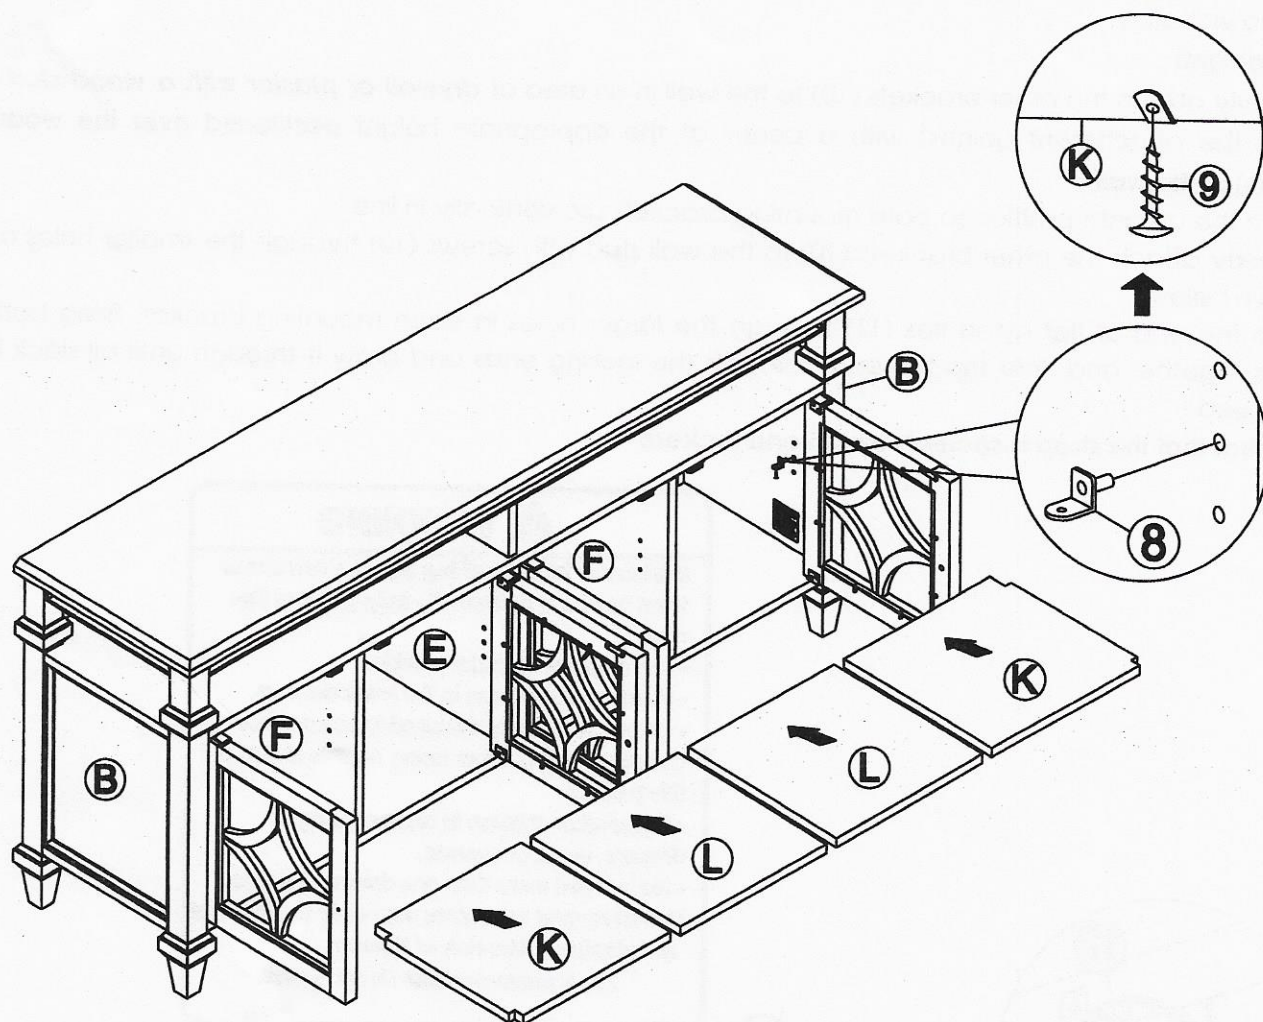



## STEP 9

Insert glass sections (M) into back of doors (H), and lock it as shown below.

Attach knobs (1) to front of doors (H) with pan head screws (2) as shown below. Tighten with a screwdriver.

Attach brackets (10) to the back of the unit with screws (12) through the smaller holes in the brackets as shown below.

### Important!

Properly attach the other brackets (10) to the wall in an area of **drywall or plaster with a wood stud**: Mark the attachment point(s) with a pencil at the appropriate height **positioned over the wood stud(s) in the wall**.

Place the unit into position so both mounting brackets are vertically in line.

Properly attach the other brackets (10) to the wall stud with screws (13) through the smaller holes as shown below.

Lace the end of flat nylon ties (11) through the larger holes in each mounting bracket. Bring both ends together and slide the flat ends through the locking ends and draw it through until all slack is removed.

**Confirm that the strap is securely laced and locked.**

### ⚠ WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To help prevent tipover:

- Install tipover restraint provided.
  - Place heaviest items in the lower drawers.
  - Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
  - Never allow children to climb or hang on drawers, doors or shelves.
  - Never open more than one drawer at a time.
- Use of tipover restraints may only reduce, but not eliminate, the risk of tipover.

*This is permanent label. Do not remove.*

