


ASSEMBLY INSTRUCTIONS

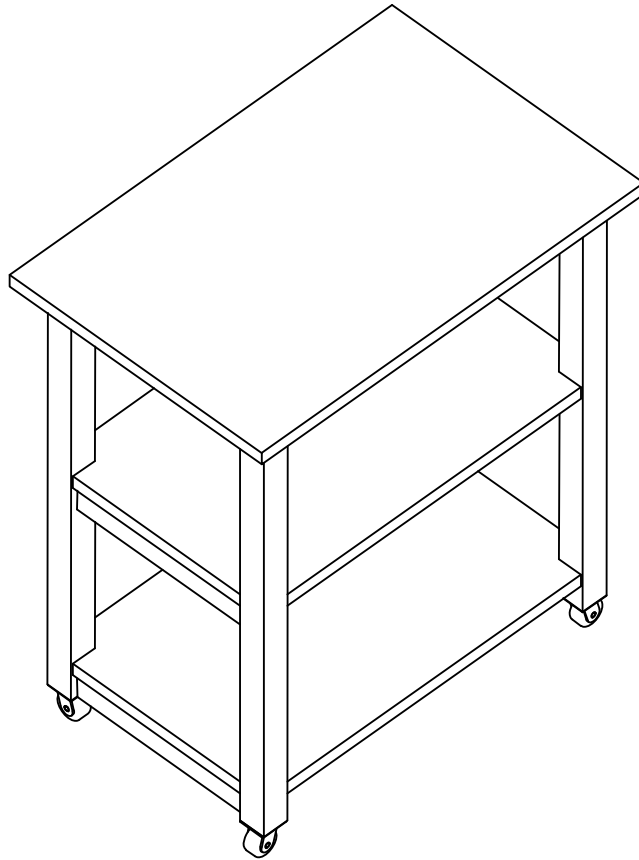

Description : MICROWAVE CART
Item No. : WC-185

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:




Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

ASSEMBLY TOOLS REQUIRED NOT INCLUDED











PART LIST

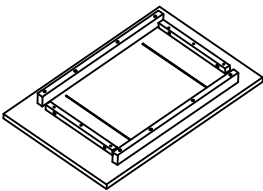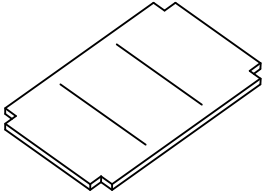When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Top	01		B	Side frame	02	
C	Shelf	02					


HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6x35mm)	4		5	Allen key (4X80mm)	1	
2	Spring washer ($\phi 6.5 \times 11 \text{mm}$)	4		6	Castor ($\phi 40 \text{mm}$)	2	
3	Flat Washer ($\phi 6.5 \times 19 \text{mm}$)	4		7	Lock castor ($\phi 40 \text{mm}$)	2	
4	Screw (M4x35mm)	8		8	Castor insert cap	4	


STEP 1

Attach side frame (B) to top (A) with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (5).

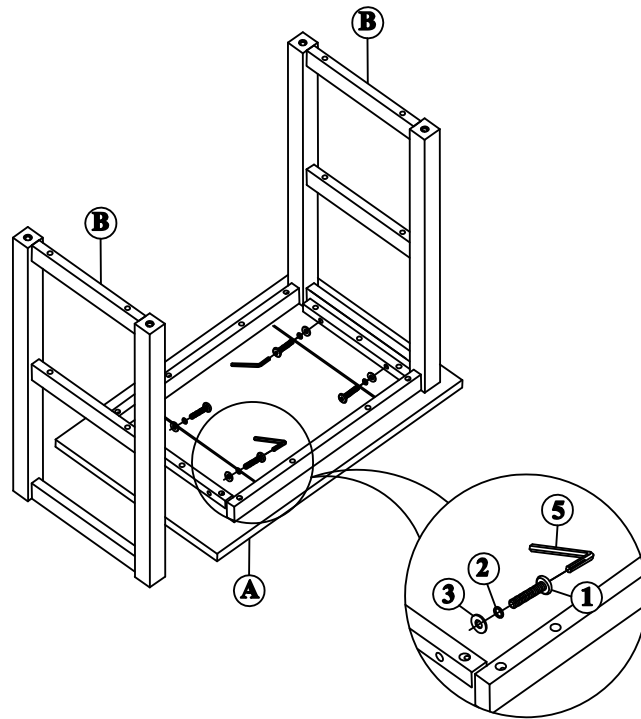

STEP 2

Attach shelves (C) to the side frames (B) with screws (4) as shown below. Tighten with a screwdriver.

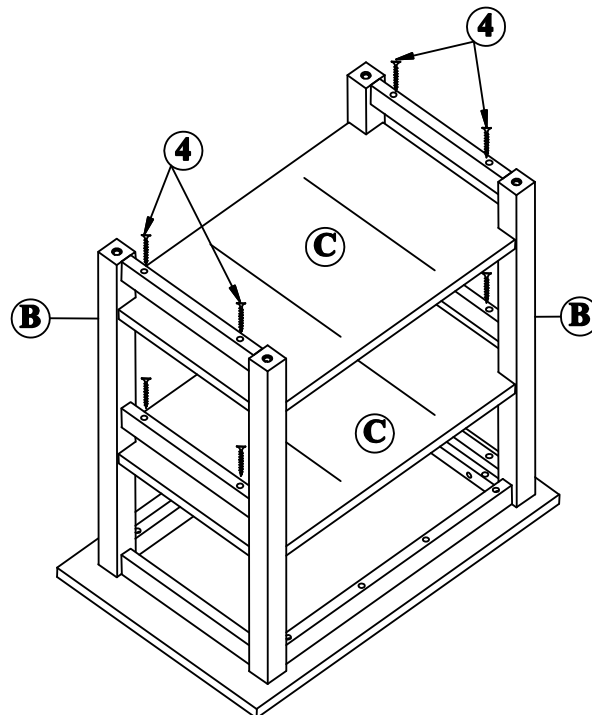

STEP 3

Attach castors (6), and lock castors (7) and castor insert caps (8) to the bottom of each leg (B) as shown below.

