


ASSEMBLY INSTRUCTIONS

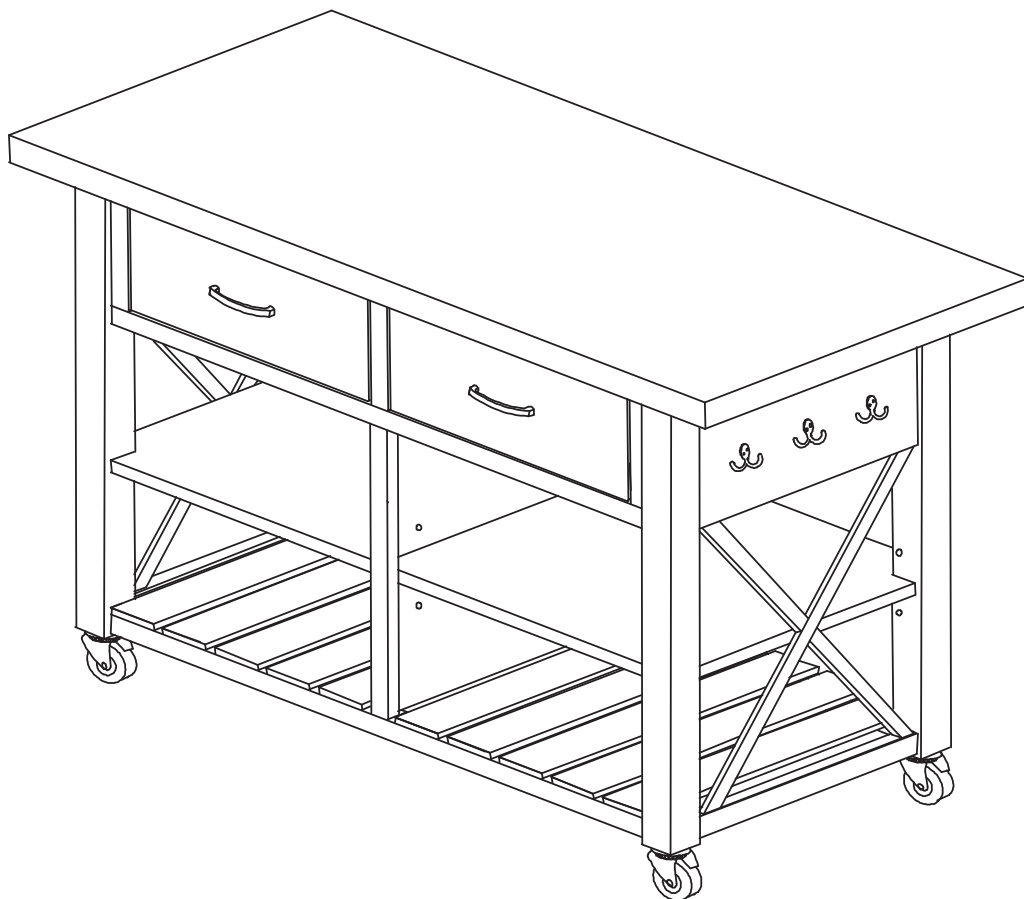

Description : KITCHEN ISLAND 36X24X36 HIGH
Item No. : WC-12

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.






ASSEMBLY TOOLS REQUIRED

NOT INCLUDED















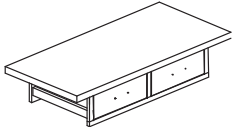

PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Top	1		B	Side panel (L - R)	2	
C	Vertical panel	1		D	Bottom panel	1	
E	Shelf	2					


HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Short bolt (M6 x 35mm)	10		2	Long bolt (M6 x 45mm)	2	
3	Lock Washer (Φ6.5 x 11mm)	12		4	Flat Washer (Φ6.5 x 19mm)	12	
5	Screw (M4x35mm)	8		6	Screw (M3.5 x 15mm)	14	
7	Screw (M6x20mm)	16		8	Pan head screw (M4 x 20 mm)	4	
9	Handle	2		10	Shelf support bracket	8	
11	Lock caster	2		12	Caster	2	
13	Hanger	3		14	Allen key (4x80mm)	1	

STEP 1


Take out drawers as shown below.

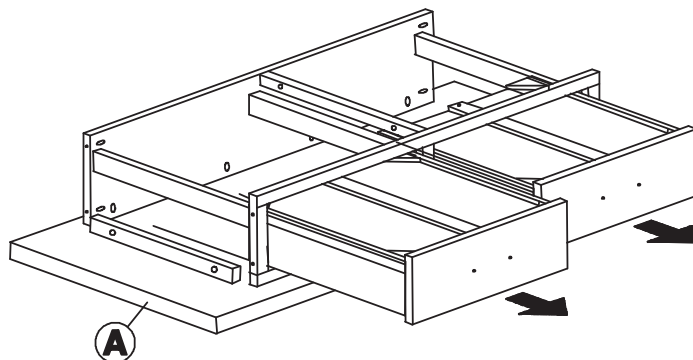

STEP 2


Attach side panel (B) to top (A) with bolts (1), and washers (3) and (4) as shown below. Tighten with allen key (14).

Then attach side panel (B) to top (A) with screws (5) as shown below. Tighten with a screwdriver.

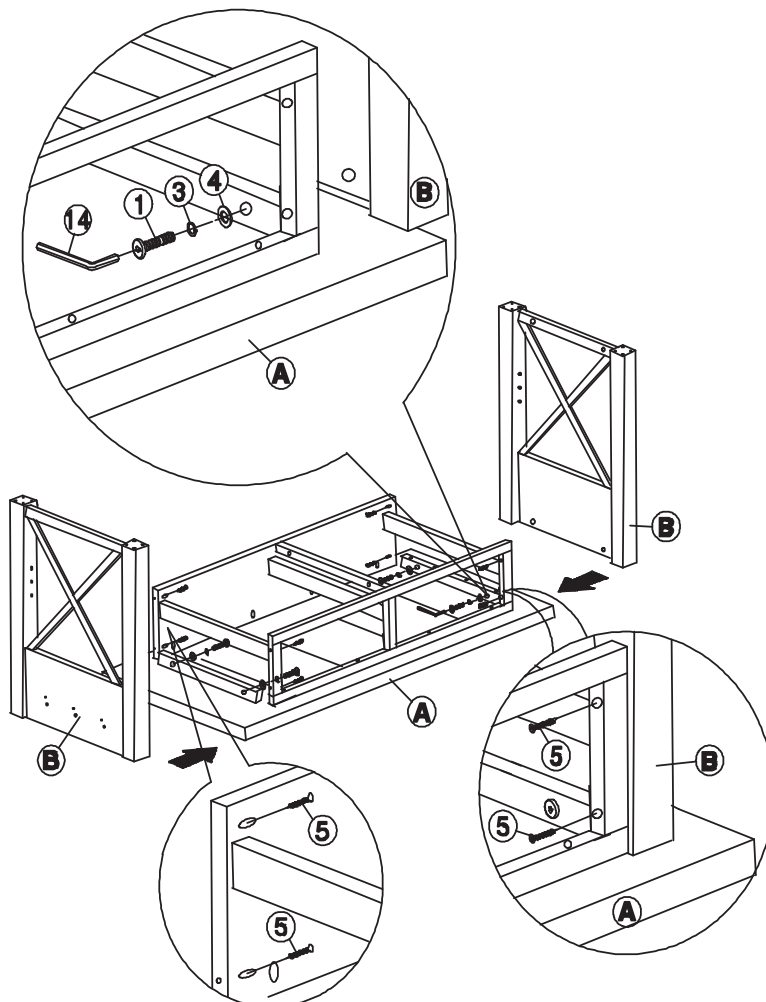


STEP 3

Attach vertical panel (C) to top (A) with bolts (1), and washers (3) and (4) as shown below. Tighten with allen key (14).

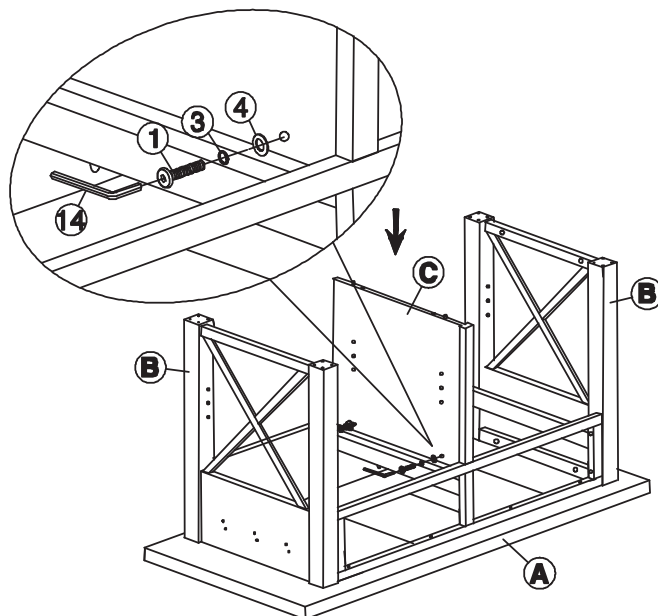

STEP 4


Attach bottom panel (D) to side panel (B) and vertical panel (C) with bolts (1), (2), and washers (3) and (4) as shown below. Tighten with allen key (14).

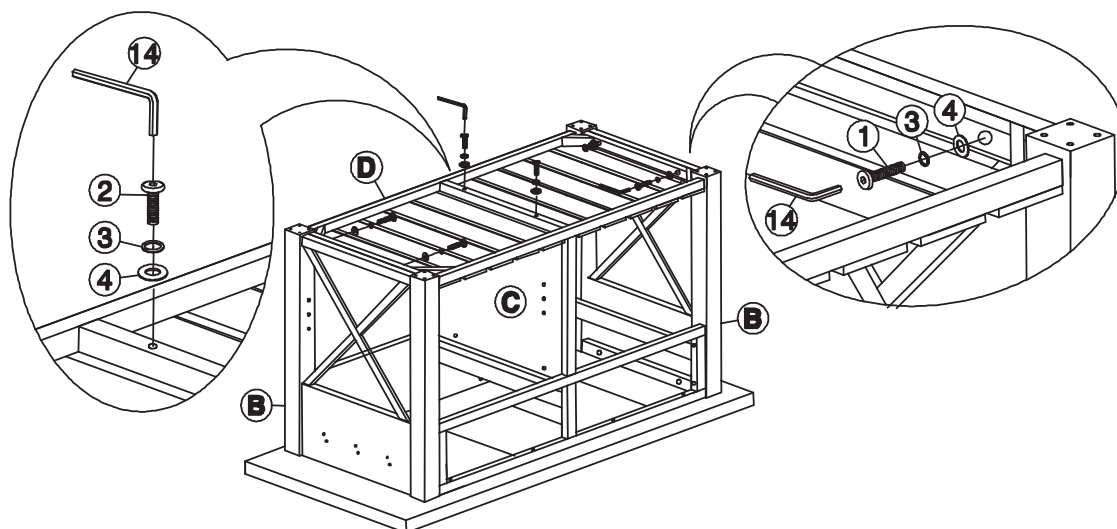

STEP 5


Put the drawers into the unit

Attach castors (11) and (12) to the bottom of side panel (B) by using screws (7) as shown below. Tighten with a screwdriver.

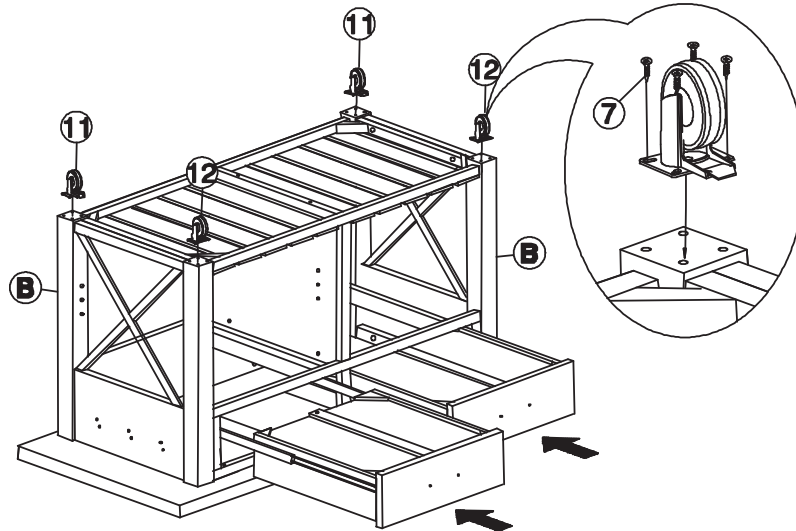

STEP 6

Attach shelf support brackets (10) to the unit. Place the shelves (E) on the brackets and attach with screws (6) as shown below. Tighten with a screwdriver.

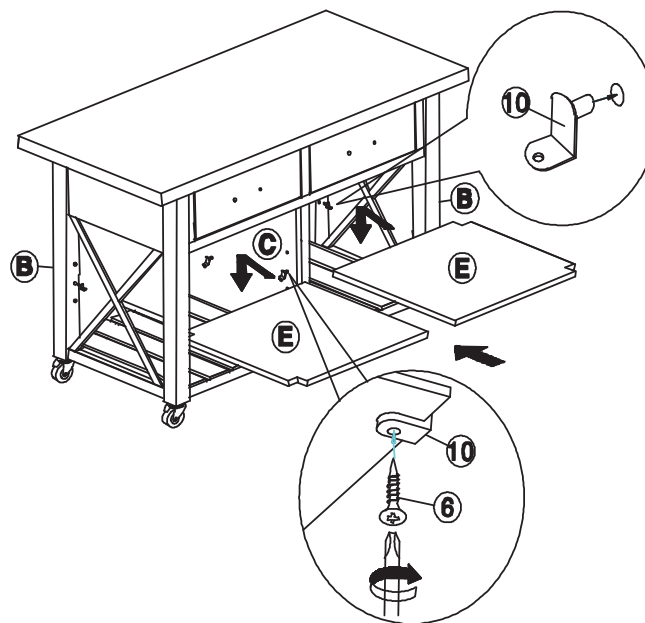

STEP 7

Attach handle (9) to the drawer front with screw (8). Tighten with a screwdriver.

Attach Hanger (13) to side panel (B) with screw (6) as shown below. Tighten with a screwdriver.

