
CINTERNATIONAL WHITEWOOD John Thomas

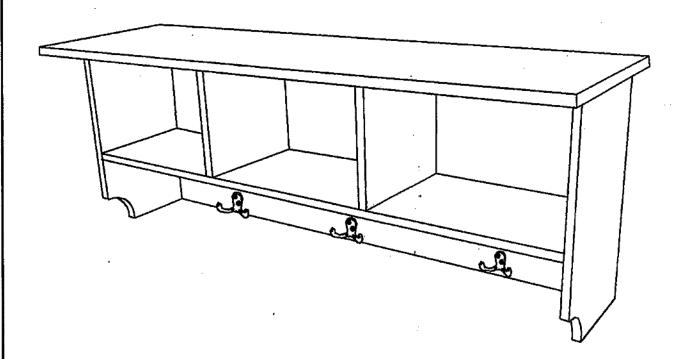

ASSEMBLY INSTRUCTIONS



Description

· 机熔铁水管 **建筑树间**板 中中的小小小小子子

: ENTRY SHELF : SH-150

Item No.

ITEM NO.: SH-150 REVISED JUN 8, 2012


BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present. If hardware is missing or you have difficulty assembling this product, please call Toll Free: 1-888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and boilts until completely assembled.
- Keep all hardware parts out of reach of children.

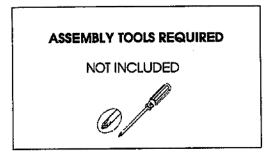

PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Тор	1		В	Side panel	2	
С	Vertical panel (L-R)	2		D	Bottom panel	1	
E	Bottom Crossbar	1	[F	Back panel	2	

ITEM NO.: SH-150 REVISED JUN 8, 2012


HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6x30mm)	16		2	Lock washer (φ6.5x11mm)	16	Ø
3	Flat washer (\$\phi6.5x13mm) 16		0	4	Cam bolt	2	
5	Cam lock ·	2	2	6	Screw (M4x15mm)	8	(-2242c
7	Allen key (4mm)	1		8	Plastic Dowel (40mm)	2	O STATUTE
9	Screw (M4x40mm)	2	(S. Dallagana)	10	Steel band	2	6 0

STEP 1


Attach vertical panels (C) to bottom panel (D) with bolts (1), and washers (2) and (3) as shown below .Tighten with Allen key (7).

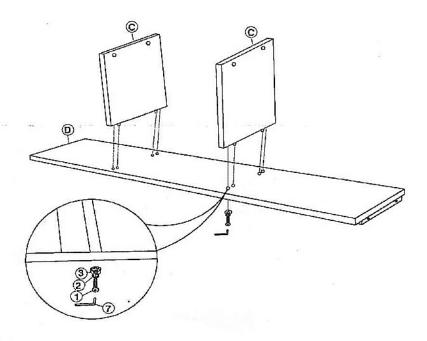

ITEM NO.: SH-150 REVISED JUN 8, 2012


STEP 2

Attach side panels (B) and bottom crossbar (E) to bottom panel (D) with bolts (1), washers (2) and (3), cam bolts (4), and cam locks (5) as shown below. Tighten with Allen key (7).

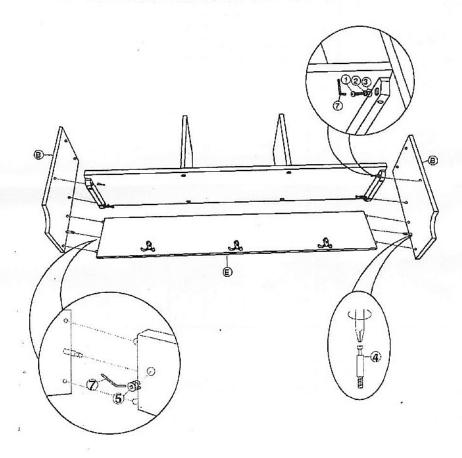


STEP 3

Attach back panel (F) into groove of the unit. Attach top (A) to the unit with bolts (1) and washers (2) and (3) as shown below. Tighten with Allen key (7)

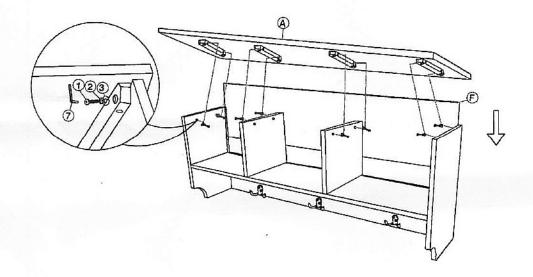

STEP 4


Attach back panel (F) to the unit with screws (6) as shown below. Tighten with a screwdriver.

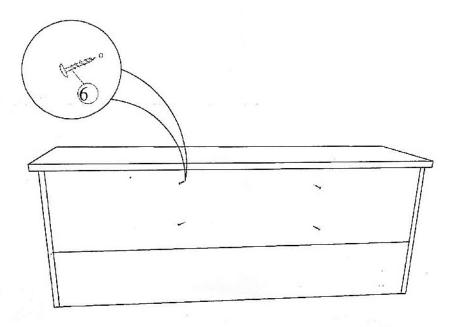

ITEM NO.: SH-150 REVISED JUN 8, 2012

STEP 5

Attach steel bands (10) to the unit with screws (6). Then attach steel bands (10) to a wall with plastic dowels (8) and screws (9) as shown below.

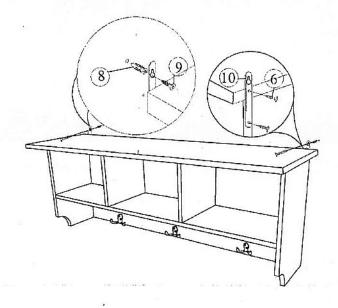

ITEM NO.: SH-150 REVISED JUN 8, 2012