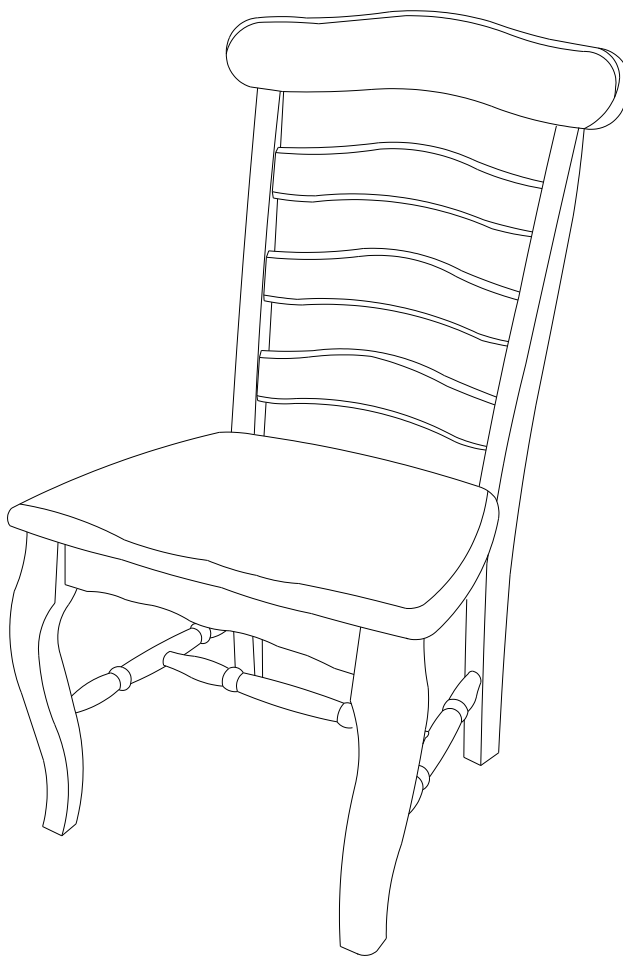


# ASSEMBLY INSTRUCTIONS

---



---

Description : COUNTRY FRENCH LADDERBACK  
CHAIR W/WOOD SEAT  
Item No. : C-219

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

### IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

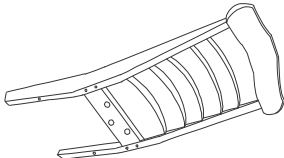
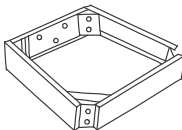


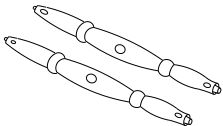

### ASSEMBLY TOOLS REQUIRED

NOT INCLUDED



## PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:








NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
<b>A</b>	Back	1		<b>B</b>	Seat frame	1	
<b>C</b>	Wood seat	1		<b>D</b>	Front leg (L-R)	2	
<b>E</b>	Side stretcher (L-R)	2		<b>F</b>	Center stretcher	1	

ITEM NO.: C-219  
REVISED JUL 2, 2012

Printed in Vietnam

## HARDWARE LIST

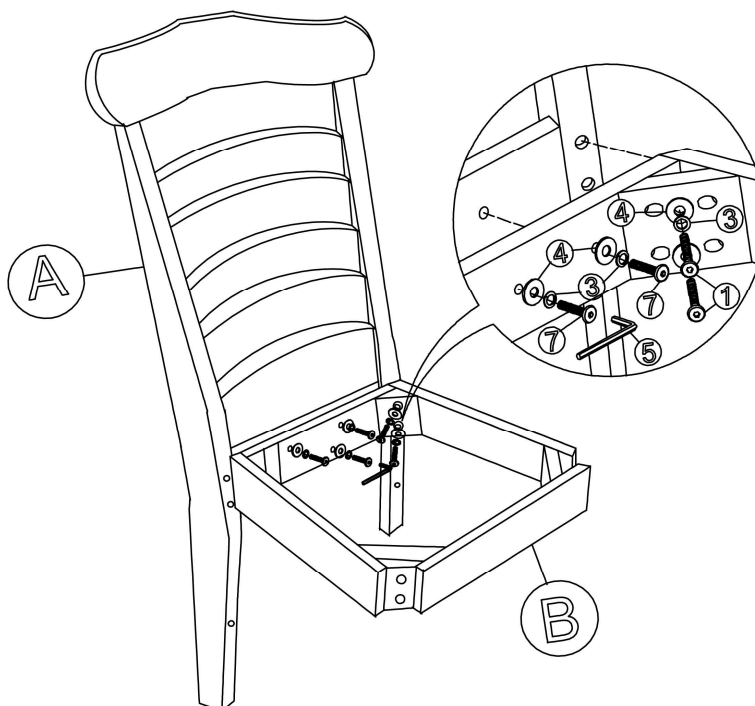
When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Long bolt ( M6x80mm)	4		2	Short bolt (M6x60mm)	4	
3	Lock washer ( Φ6.5xΦ11mm)	11		4	Flat washer ( Φ6.5xΦ19mm)	11	
5	Allen key (4mm)	1		6	Screw (M4x35mm)	10	
7	Short bolt (M6x40mm)	3					

## STEP 1

Attach Seat Frame (B) to the Back (A) with bolts (7) and (1), and Washers (3) and (4). Tighten with Allen Key (5) as shown below.

Note: DO NOT fully tighten any of the bolts, until the chair is assembled, then put on a flat level surface to make sure the chair is level and then tighten the bolts.

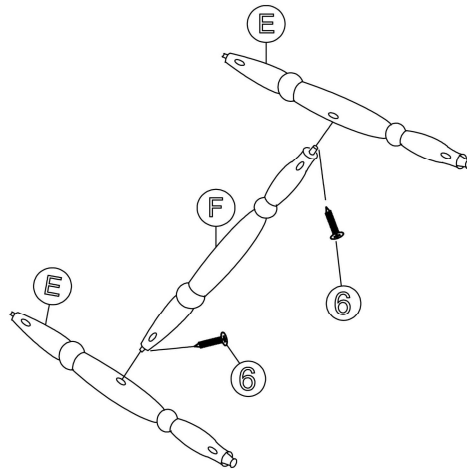


ITEM NO.: C-219  
REVISED JUL 2, 2012

Printed in Vietnam

## STEP 2

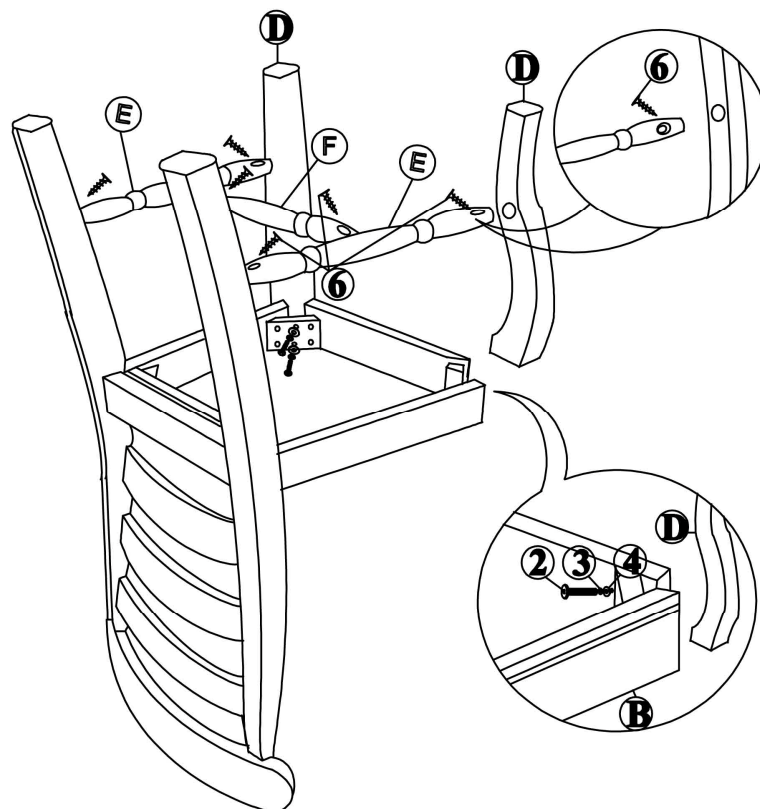
Attach Middle stretcher (F) to Side Stretchers (E) with Screws (6). Tighten with a screwdriver.



## STEP 3

Attach Front Legs (D) to the seat frame with bolts (2), and Washers (3) and (4). Tighten with Allen Key (5).

Place Side Stretchers (E) (from step 2) between front and back legs, use the screwdriver to tighten the screws (6) as shown below.



## STEP 4

Attach the Seat (C) to top of the seat frame (from Step 3) by using Screws (6) tighten with a screw driver.

