

# Heritage Storage Bed Instructions

## Tools Required:

- Phillips head screwdriver (Power screwdriver recommended)

## Components of bed:

\_\_ 2 Pedestals



\_\_ Spacer Kit



\_\_ Headboard & Footboard



## Hardware:

\_\_ 8 – 1 1/4” flat head wood screws / (found in spacer kit)



(Figure 1)

## Step 1:


Place pedestals side by side in the area where the bed will be located.



(Step 1)

## Step 2:

1. Place spacer boards on cleats and attach with 8 – 1 1/4” flat head wood screws (See figure 1).
2. Lay spacer board flat on top of cleats (on backside of pedestal).

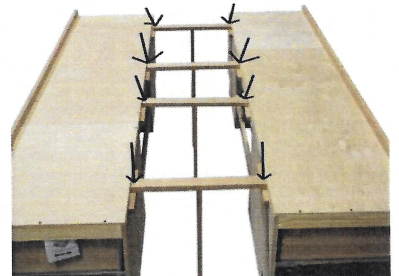


Step 3:

Remove drawers on the headboard and footboard end and number them so they go back to the original locations.



Step 4:

Slide bolts into brackets located on the pedestals and tighten with 1/2" wrench.

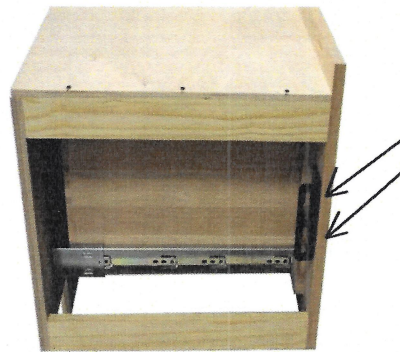

(Slide headboard and footboard bolts into bracket and push down.)

Step 5:

Place drawers back into pedestals.

