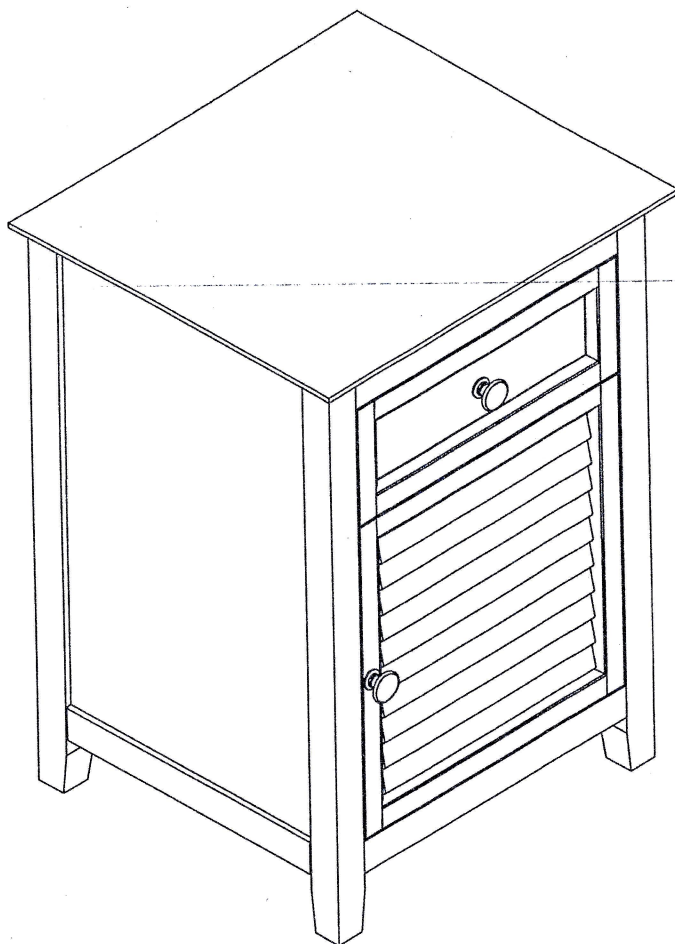


# ASSEMBLY INSTRUCTIONS

---



**WARNING!**

*Serious or fatal injuries can occur from furniture tip over. Use tip over restraint (provided) to secure this product to the wall.*

---

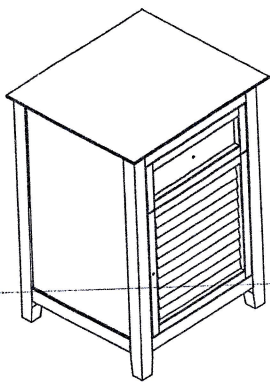
Description	: HIGH TIDE NIGHTSTAND
Item No.	: BD-1201D

ITEM NO.: BD-1201D  
ISSUED MAR 03, 2021

Printed in Vietnam

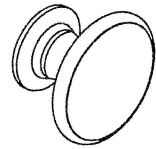





## PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch
A	NIGHTSTAND	1	

## HARDWARE LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	METAL KNOB ( $\Phi 30 \times 30\text{mm}$ )	2		2	Pan head screw (M4 x 22mm)	2	
3	Short Pan head screw (M4 x 15mm)	2		4	Long Pan head screw (M4 x 50mm)	2	
5	Steel Tip Bracket	4		6	Flat Nylon Tie	2	

## STEP 2

Attach brackets (5) to the back of the unit with screws (3) through the smaller holes in the brackets as shown below.

### Important!

Properly attach the other brackets (5) to the wall in an area of **drywall or plaster with a wood stud**: Mark the attachment point(s) with a pencil at the appropriate height **positioned over the wood stud(s) in the wall**.

Place the unit into position so both mounting brackets are vertically in line.

Adjust the levelers to the appropriate height to level the unit.

Properly attach the other brackets (5) to the wall stud with screws (4) through the smaller holes in the brackets as shown below.

Lace the end of flat nylon ties (6) through the larger holes in each mounting bracket. Bring both ends together and slide the flat ends through the locking ends and draw it through until all slack is removed.

**Confirm that the strap is securely laced and locked.**

