

FANBACK SERIES
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#365 Fanback Rocker



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16" Wrench

Included Hardware

A		4	1/4" x 3" Carriage Bolt
B		4	1/4" Nut
C		2	1/4" x 3 1/2" Lag Bolt
D		12	2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, line up the back and pull the back tight to the seat slat. (Illustration 2)
3. With a #2 Square Head Bit, insert 2 (D) 2" screws into the pre-drilled holes and fasten to the bottom back board. Repeat on the other side. (Illustration 2)
4. Fasten the arm & leg combo to the seat using 2 (A) 1/4" x 3" Carriage Bolts & 2 (B) 1/4" Nuts. Do not tighten the nuts till complete. Repeat on other side. (Illustrations 3 & 4)
5. Fasten the arm & leg combo to the back using 1 (C) 1/4" x 3 1/2" Lag Bolt. Repeat on the other side. (Illustration 5)
6. Turn the chair upside down with the arms down. Fasten the rocker runners with 8 (D) 2" screws. (Illustrations 6 & 7)

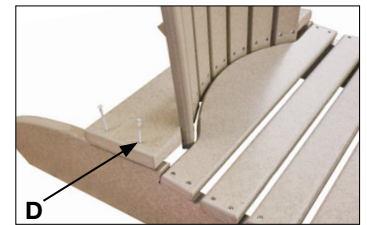
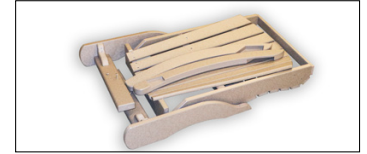


Illustration 2

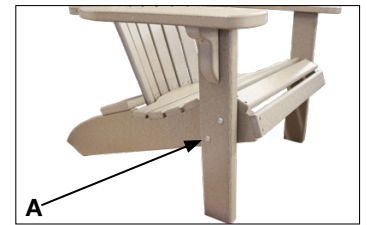


Illustration 3

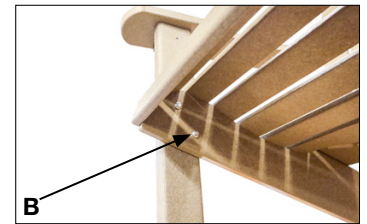


Illustration 4

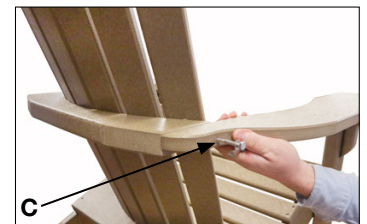


Illustration 5



Illustration 6



Illustration 7